

---

# Contents

CD 70 / DVD 90 NAVI .....	3
CD 30 / CD 30 MP3 .....	73
R 10 / CC 20 .....	99
Mobile phone portal .....	121



---

# CD 70 / DVD 90 NAVI

Introduction .....	4
Radio .....	22
CD Player .....	30
AUX input .....	34
Navigation .....	36
Index .....	70

## Introduction

General information .....	4
Theft-deterrent feature .....	5
Overview .....	7
Operation .....	11
Tone settings .....	19
Volume settings .....	20

### General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

Enjoy uninterrupted radio reception thanks to the powerful twin tuner.

The radio has ten automatic station memories for each available waveband and the same number of manual station memories.

The integrated CD player will entertain you with audio CDs and MP3 CDs.

Furthermore, you can connect external sources, e. g. a portable player to the Infotainment system.

The digital sound processor provides you with several preset equalizer modes for sound optimisation.

The navigation system with dynamic route planning will reliably guide you to your destination, and, if desired, will automatically avoid traffic jams or other traffic problems.

Optionally, the Infotainment system can be operated using controls on the steering wheel.

In addition the Infotainment system can be equipped with a Mobile phone portal.

The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

### Important information on operation and traffic safety

#### Warning

The Infotainment system has to be used so that the vehicle can be driven safely at all times. If in doubt stop your vehicle and operate the Infotainment system while the vehicle is stationary.

### Warning

The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The related traffic regulations must always be followed.

Only make entries (e. g. addresses) with the vehicle stationary.

If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

### Warning

In some areas one-way streets and other roads and entrances (e. g. pedestrian zones) that you are not allowed to turn into are not marked on the map. In such areas the Infotainment system will issue a warning that must be accepted. Here you must pay particular attention to one-way streets, roads and entrances that you are not allowed to drive into.

### Radio reception


Radio reception may be disrupted by static, noise, distortion or loss of reception due to

- changes in distance from the transmitter,
- multi-path reception due to reflection,
- shadowing.

### Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrent.


The Infotainment system therefore functions only in your vehicle and is worthless for a thief.

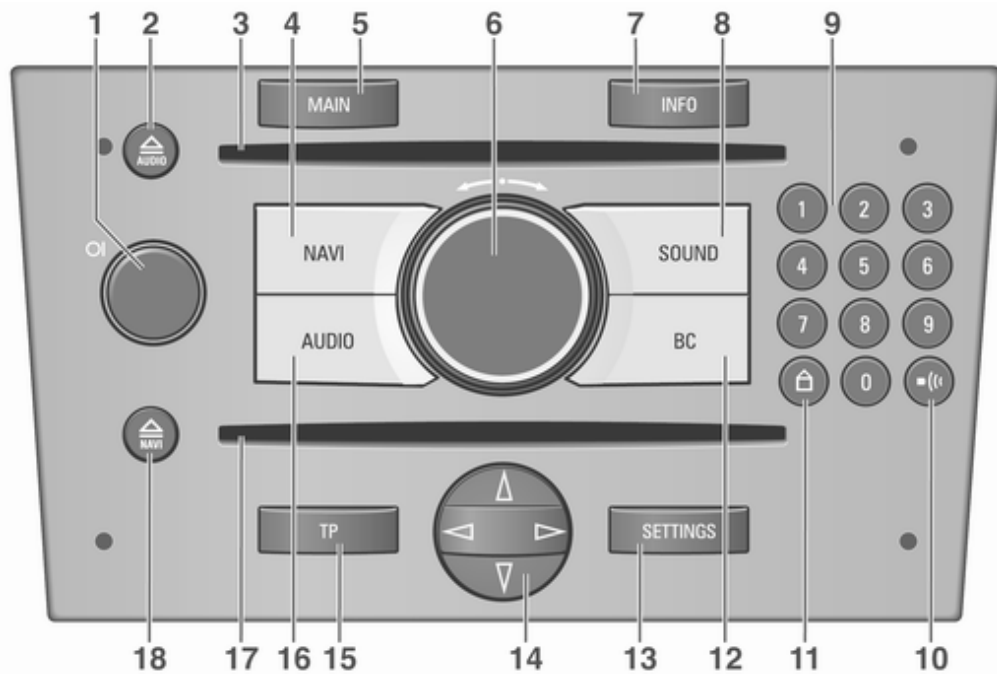

## Overview



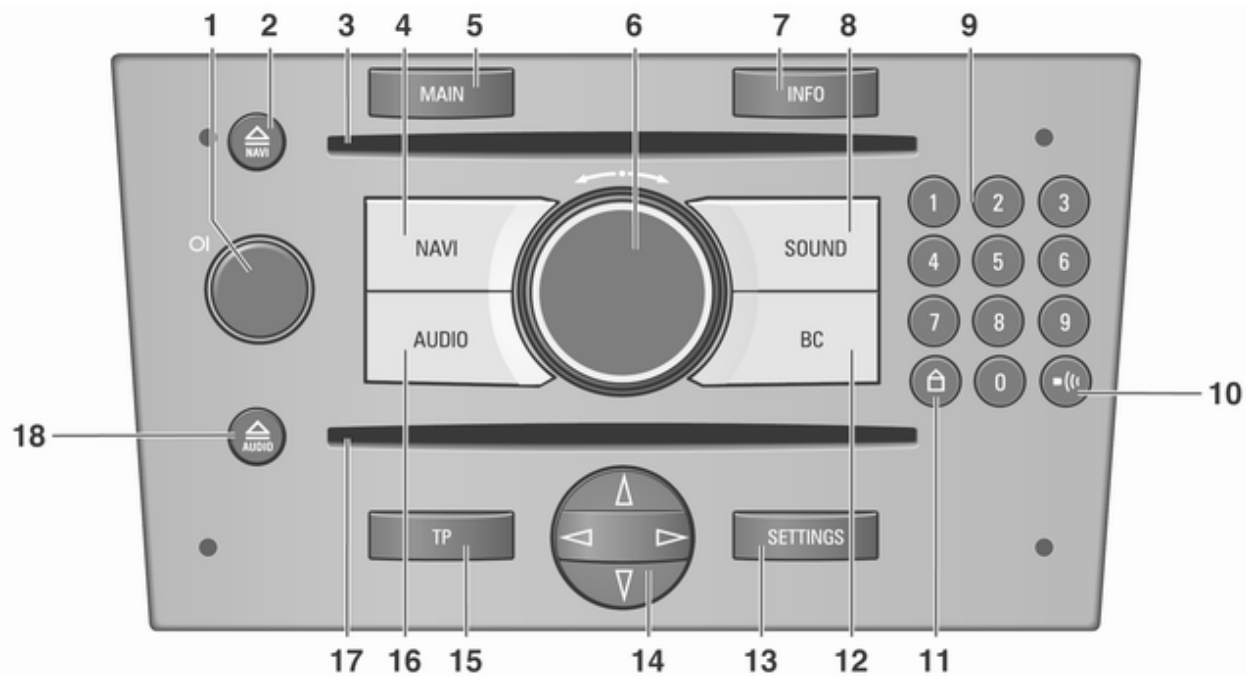

### Instrument panel: CD 70 NAVI

<b>1</b>	OI knob ..... 11	<b>9</b>	0...9 station buttons ..... 22	<b>17</b>	Navigation CD slot ..... 31
	Briefly press: switch on/off		Long press: save station ..... 22	<b>18</b>	≡ button ..... 38
	Infotainment system ..... 11		Short press: select station ... 22		Eject navigation CD ..... 38
	Press and hold: activate/	<b>10</b>	⏮ button ..... 57		
	deactivate mute ..... 11		Repeat last navigation		
	Turn: adjust volume ..... 11		message ..... 57		
<b>2</b>	≡ button ..... 31	<b>11</b>	⏪ button ..... 44		
	Eject audio/MP3 CD ..... 31		Recall home address ..... 44		
<b>3</b>	Audio/MP3 CD slot ..... 38	<b>12</b>	BC ..... 6		
<b>4</b>	NAVI ..... 38		Trip computer (if available) .... 6		
	Navigation menu ..... 38	<b>13</b>	SETTINGS ..... 11		
<b>5</b>	MAIN ..... 11		Settings menu, depending		
	Recall main display ..... 11		on the selected function ..... 11		
<b>6</b>	Multifunction knob ..... 11	<b>14</b>	Rocker switch ..... 24		
	Turn: select menu items		Radio: search backwards/		
	and commands ..... 11		forwards ..... 24		
	Press: confirm a selection		CD/MP3: skip track		
	(OK) ..... 11		backwards/forwards ..... 31		
<b>7</b>	INFO ..... 11		Navigation: scroll through		
	Additional, situation-		map displays and select		
	dependent information ..... 11		options ..... 63		
<b>8</b>	SOUND ..... 19	<b>15</b>	TP ..... 26		
	Sound settings ..... 19		Activate or deactivate		
			radio traffic service ..... 26		
		<b>16</b>	AUDIO ..... 22		
			Switch between radio and		
			CD menu ..... 22		






**Instrument panel: DVD 90 NAVI**

- |   |   |   |
|---|---|---|
| <p><b>1</b> OI knob ..... 11</p> <p>Briefly press: switch on/off<br/>Infotainment system ..... 11</p> <p>Press and hold: activate/<br/>deactivate mute ..... 11</p> <p>Turn: adjust volume ..... 11</p> <p><b>2</b>  button ..... 38</p> <p>Eject navigation CD/DVD ..... 38</p> <p><b>3</b> Navigation CD/DVD slot ..... 31</p> <p><b>4</b> NAVI ..... 38</p> <p>Navigation menu ..... 38</p> <p><b>5</b> MAIN ..... 11</p> <p>Recall main display ..... 11</p> <p><b>6</b> Multifunction knob ..... 11</p> <p>Turn: select menu items<br/>and commands ..... 11</p> <p>Press: confirm a selection<br/>(OK) ..... 11</p> <p><b>7</b> INFO ..... 11</p> <p>Additional, situation-<br/>dependent information ..... 11</p> <p><b>8</b> SOUND ..... 19</p> <p>Sound settings ..... 19</p> | <p><b>9</b> 0...9 station buttons ..... 22</p> <p>Long press: save station ..... 22</p> <p>Short press: select station .... 22</p> <p><b>10</b>  button ..... 57</p> <p>Repeat last navigation<br/>message ..... 57</p> <p><b>11</b>  button ..... 44</p> <p>Recall home address ..... 44</p> <p><b>12</b> BC ..... 6</p> <p>Trip computer (if available) .... 6</p> <p><b>13</b> SETTINGS ..... 11</p> <p>Settings menu, depending<br/>on the selected function ..... 11</p> <p><b>14</b> Rocker switch ..... 24</p> <p>Radio: search backwards/<br/>forwards ..... 24</p> <p>CD/MP3: skip track<br/>backwards/forwards ..... 31</p> <p>Navigation: scroll through<br/>map displays and select<br/>options ..... 63</p> <p><b>15</b> TP ..... 26</p> <p>Activate or deactivate<br/>radio traffic service ..... 26</p> <p><b>16</b> AUDIO ..... 22</p> <p>Switch between radio and<br/>CD menu ..... 22</p> | <p><b>17</b> Audio/MP3 CD slot ..... 38</p> <p><b>18</b>  button ..... 31</p> <p>Eject audio/MP3 CD ..... 31</p> |
|---|---|---|

## Steering wheel audio controls

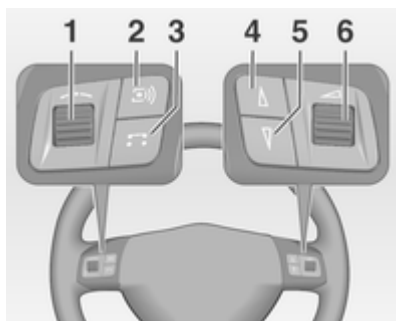

- 1 Thumbwheel ..... 11  
Turn: select menu items  
and commands ..... 11  
Press: confirm a selection  
(OK) ..... 11
- 2 button ..... 22  
Radio: select station  
button ..... 22  
CD: CD restart ..... 31  
MP3: next album ..... 31
- 3 button ..... 31  
Switch between radio and  
CD/MP3 mode ..... 31

- 4 button ..... 24  
Radio: search backwards,  
scroll down in station  
memory ..... 24  
CD/MP3: skip track  
backwards, fast rewind ..... 31
- 5 button ..... 24  
Radio: search forwards,  
scroll up in station memory ... 24  
CD/MP3: skip track  
forwards, fast forward ..... 31
- 6 Thumbwheel ..... 20  
Turn: adjust volume ..... 20

The steering wheel remote control has other functions in conjunction with the Mobile phone portal, see chapter for Mobile phone portal.









## Symbols in the main display

## Audio function

- AM** = AM waveband is selected.
- FM** = FM waveband is selected.
- AS** = FM or AM Autostore level is selected.
- [ ]** = Traffic programme is active, however no TP station is being received.
- TP** = The station selected transmits traffic announcements.
- [TP]** = Traffic programme is active, traffic announcements will be relayed.
- TMC** = RDS TMC traffic information is being received.
- REG** = Regionalisation is active.

- CD in** = An audio/MP3 CD is inserted in the audio CD slot.
- MP3** = The loaded CD contains MP3 files.

### Navigation function

-  = Route option **Fastest** route is selected.
-  = Route option **Shortest** route is selected.
-  = Route option **Motorway** is selected.
-  = Route option **Secondary roads** is selected.
-  = Route option **Toll-free** is selected.
-  = Route option **Dyn. Guidance** is active.
-  = No or insufficient GPS reception (e.g. under bridges, in forests or between high buildings).
-  = The volume of the acoustic directions is switched off.

## Operation

### Control elements

The Infotainment system is operated via function buttons, multifunctional knobs and menus that are shown on the display.

Inputs are made optionally via:

- the central control unit in the instrument panel ⇨ 6
- controls on the steering wheel ⇨ 6.

### Switching the Infotainment system on or off

Press the OI knob briefly. After switching on the last selected Infotainment source is active.

### Switching on and off with the ignition key (ignition logic)

If ignition logic is activated, the Infotainment system is automatically switched off/on by removing or inserting and turning the ignition key. See below: "Settings".

### Automatic switch-off

If the Infotainment system was switched on using the OI knob, it switches off automatically one hour after the ignition key is removed.

### Setting the volume

Turn the OI knob.

When the Infotainment system is switched on, the last selected volume is set, if that volume is lower than the maximum start up volume.

The following can be set separately:

- the maximum start up volume ⇨ 20.
- the volume of the traffic announcements ⇨ 20.
- the volume of the navigation messages ⇨ 20.

### Speed dependent volume control (SDVC)

When SDVC is activated ⇨ 20, the volume is adapted automatically to make up for the road and wind noise when driving.

### Mute

Press and hold the OI knob to mute the audio sources.

- When TP is switched on, traffic announcements continue to be heard.
- When navigation is active you will continue to hear the voice announcements.

To cancel mute again: turn the OI knob or press and hold the OI knob again.

### AUX input

An external audio source, e.g. a portable CD player, can be connected via the AUX input of your vehicle ↷ 34.

### Multifunction knob

The multifunction knob is the central control element for the menus.

#### Turn:

Select commands, menu options or letters.

#### Press:

Confirm the displayed selection.

### Info Menu

Pressing the **INFO** button displays a summary of the most important information on the selected audio source, navigation and the current traffic situation via RDS TMC.

The following information is available in the info menu:

#### Audio parameters

The top two lines show information about the audio function.

Symbols for the audio source settings (e.g. **FM/AM** for the selected waveband, **[TP]**, **REG**, etc.).

Set radio station or current CD/MP3 track.

Display symbols ↷ 6.

### Navigation parameters



The lower area of the info menu displays information on the navigation.

- Current altitude above sea level (provided adequate GPS reception is available).
- Selected route option, e.g. ⓪.
- Avoidance of toll roads €.
- Dynamic guidance active ↷↷.
- Distance remaining to destination.
- Arrival or remaining travel time, depending on navigation settings.

Display symbols ↷ 6.



If navigation is inactive:

Current geographical position with latitude and longitude (provided adequate GPS reception is available).

### TMC

You can receive up-to-date messages on the traffic situation via the **TMC** interface ↗ 38.

### Main display

The main display is the display shown after switching on the Infotainment system. It can be recalled at any time from a different menu display using the **MAIN** button.

The various functions are displayed depending on the equipment of the vehicle.

- Audio
- Navigation
- Trip computer (if available)
- Mobile phone portal (if available)

Turn the multifunction knob to call up the display of the required function.


Depending on the selected function, the following information is displayed on the main page:

### Audio



Information about the currently selected audio source (e.g. waveband, station name or frequency or CD track and track number, etc.).

### Navigation

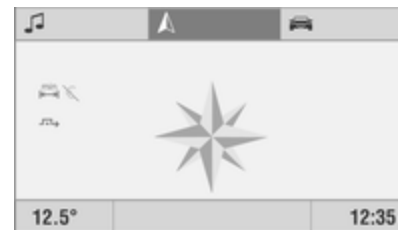

Guidance information (if guidance is activated) and navigation parameters.

### Trip computer

(if available)

The following information is displayed in all functions of the main page:

- Outside temperature
- Time of day
- Information on the climate control system (if available)

When the Infotainment system is off and the ignition is on, the outside temperature, time of day and date (if available) are displayed.

### Mobile phone portal

(if available)

Mobile phone portal information.

### Menu concept

The menu structure of the Infotainment system consists of different types of menu pages:

- Selection pages
- Feature pages
- Settings pages

The different pages have different functionalities:

### Selection pages



Selection pages have a selection menu with a preview of each menu item on the left margin of the screen. Selection pages lead you to feature or settings pages.

The **Audio** menu is an example of a selection page.

### Feature pages



Feature pages are menu pages where you stay, e.g. when you are listening to the radio or a CD.

Feature pages also have menu items that can be executed and that will lead you to further feature or settings pages.

The **FM** menu is an example of a feature page.

### Settings pages



Settings pages are menu pages where you can make settings, e.g. sound, system settings, etc.

The **CD Extras** menu is an example of a settings page.

## Menu levels

The menus of the Infotainment system are divided into levels. The current menu level is shown by vertical lines at the left-hand side of the screen (e.g. main display = no line, **FM** feature page = 1 line, etc.).

## Menu operation

By turning the multifunction knob the menu items available in a menu can be selected. Each selected menu item has an inverse field designated as the cursor.

Many of the available functions are executed directly by pressing the multifunction knob. Some open a submenu with further functions.

Each menu has the hidden **Return** menu item. This menu item only becomes visible if you get to the top end of a menu (turn the multifunction knob anti-clockwise).



Select **Return** to go to the next highest menu.

Each menu also has the hidden **Main** menu item. This menu item only becomes visible if you get to the bottom end of a menu (turn the multifunction knob clockwise).



Select **Main** to recall the main display.

This function can also be executed at any time by pressing the **MAIN** button.

## Selecting from a menu

The cursor shows which menu item is to be selected.

Move the cursor to the desired menu item by turning the multifunction knob.

Press the multifunction knob to confirm your selection.

The corresponding function is executed or the corresponding submenu displayed.

For some menu items settings are made after selecting them by turning the multifunction knob.

## Selecting from a list



For some menu items lists are called up. You can navigate these lists using the cursor.

Press the multifunction knob to confirm your selection.


Move cursor up or down by turning the multifunction knob.

Further list entries are displayed when the cursor is moved to the top or bottom area of the display. A scroll bar at the right-hand display area shows the current cursor position within the entire list.

The number of list entries appears in the top display line.

In some lists the last selected list entries are marked with a ► before the list entry.

## Pop-up menus

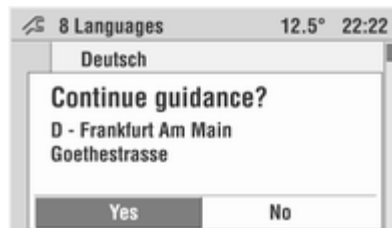

In certain cases the display shows additional notes and information of the Infotainment system or other vehicle components as a pop-up.

For this purpose, the currently displayed menu is overlaid with the pop-up.

You have to confirm some of the pop-ups (e.g. the safety warnings of the navigation), others will automatically disappear after a short period.

In CD mode, for example, the traffic station is displayed during a traffic announcement when TP is active.

## Recalling main functions

The main functions are recalled using the **NAVI**, **AUDIO**, **SOUND** and **BC** buttons:

- To recall the navigation menu, press the **NAVI** button.
- Press the **AUDIO** button to access the radio, CD/MP3 CD sources.
- Press the **SOUND** button to open the sound settings menu.
- Press the **BC** button to display the functions of the trip computer (if available).

## Audio sources

The available audio sources are radio (AM/FM) and CD (audio/MP3).

In addition, you can connect an external audio source.

### Radio:

You can choose between the FM and AM wavebands.

### CD/MP3:

The CD player integrated into the Infotainment system supports both audio CDs and CDs in MP3 format.



### Aux:

You can switch to an externally-connected audio source via the Aux option.

The Aux audio source can only be selected via the Audio menu.

### Selecting an audio source

If the radio or CD menu is displayed:

Press the **AUDIO** button to switch between the radio and CD/MP3 CD audio sources.

If one of the other menus (e.g. navigation, settings, etc.) is active:


Press the **AUDIO** button once.

The radio or CD/MP3 menu appears in the display.

Press the **AUDIO** button again to change audio source.

If no CD (audio or MP3) is inserted into the audio CD slot of the Infotainment system, the Infotainment system prompts you to insert a CD.

### Selecting audio source using the Audio menu

1. Press the **MAIN** button.
2. Select the  audio function in the main display.
3. Press the multifunction knob.
4. Select the **Return** menu item.

The **Audio** menu is displayed.



5. Select the **FM**, **AM**, **CD** or **AUX** menu item to switch to the desired audio source.

The selected audio source is played.

The Infotainment system automatically switches to the display page of the selected audio source (not with **AUX**).

### Settings

The Infotainment system provides you with various options to customise the behaviour and functions of the system according to your personal preferences.

Use the **SETTINGS** button to access the relevant **Settings** menu, depending on the selected function (main page, radio, navigation, Mobile phone portal).

The following settings menus are available:

- System settings (see below)
- Audio settings ⇨ 26
- Navigation settings ⇨ 38
- Mobile phone portal (see chapter for Mobile phone portal)

## System settings



From the main page, you can make all the settings that influence the displays and functions of the entire Infotainment system.

To recall the main page, press the **MAIN** button.

Press the **SETTINGS** button.

The **Settings** menu for the system settings is displayed.

The following settings are described in the vehicle owner's manual:

- Time, Date
- Units
- Day / Night

## Setting the language



You can change the language of menu texts and navigation prompts.

You need the languages CD in order to change the prompt language.

In the **Settings** menu for the system settings:

1. Select the **Language** menu item.  
The list of available languages is displayed.
2. Select the desired language from the list.

You are prompted as to whether you want to change the prompt language in addition to the language of menu texts.

### 3. Answer **No**:

The language of menu texts is changed.

The prompt language remains unchanged.

### 4. Answer **Yes**:

You will be prompted to insert the languages CD in the navigation DVD/ CD slot for the Infotainment system.

5. Remove the navigation DVD/CD by pressing the **≡** button.
6. Insert the languages CD and select the **Continue** menu item.

The selected prompt language is loaded from the languages CD.

Loading can take several minutes.

### Caution

Do not switch off the Infotainment system or the ignition under any circumstances while loading is in progress.

Do not start the engine under any circumstances while loading is in progress.

Do not press any button on the unit while loading is in progress.

After successful loading, you will be prompted to remove the languages CD and to re-insert the navigation DVD/CD.

### Ignition lock logic

The Infotainment system is normally switched on and off with the OI knob.

When the system is switched on, it can be switched off and back on again by retracting and/or inserting and turning the ignition key.

This ignition lock logic is activated as a factory setting, but can be bypassed.

### Switching ignition lock logic on/off

Switch the ignition lock logic on or off by confirming the Ign. logic menu item.

- With the ignition lock logic switched off, the Infotainment system can only be switched on and off with the OI knob.
- After the system has been disconnected from the operating voltage (e.g. removal of the battery) and reconnected, the ignition lock logic is always on.
- The automatic switch-off is independent of the ignition lock logic and therefore always remains active.

### Tone settings

The settings for **Bass**, **Treble** and **Sound** can be set separately for radio and CD/MP3).

The settings for **Fader** and **Balance** apply to all sources and cannot be set separately.


Select the desired source (FM/AM or CD/MP3) for which you want to adjust the sound.

Press the **SOUND** button to recall the **Sound** menu.



The display automatically shows the menu items for sound settings.


### Setting bass and treble

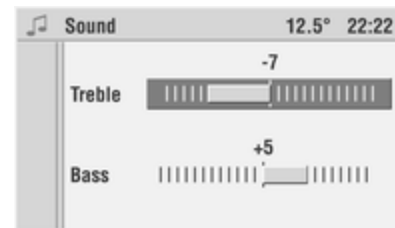

Select **Bass** or **Treble**.

Set the desired value for the option selected and confirm by pressing the multifunction knob.


### Setting the volume distribution between front - rear and left - right

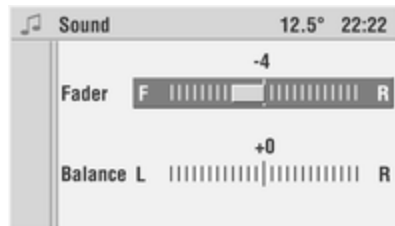

Select **Fader** or **Balance**.

Set the desired value for the option selected and confirm by pressing the multifunction knob.

### Setting the sound

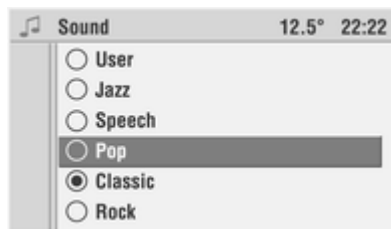

If you prefer a preset sound style there are five options to select from.

Select the **Sound** menu item.

The list of available sound styles is displayed.

Activate the desired sound style.

Under the **User** sound style you can store your own personal settings for treble and bass.

When you adjust treble and bass the **User** sound style is automatically selected.

### Volume settings

Press the **AUDIO** button to recall the **Audio** menu.

Press the **SETTINGS** button.

The audio **Settings** menu appears.

The submenu **Volumes** allows you to customise the following volumes to your requirements:

#### TA Volume:

The system increases the volume in a standard manner for every traffic announcement if the TP function is activated. Using this function, you can change the minimum volume for traffic announcements.

#### SDVC (Speed Dependent Volume Control):

The purpose of the **SDVC** function is to compensate for outside and road noises. To this effect, the volume of the unit is increased at higher speeds.

#### Navi announc.:

Volume of the navigation announcements ↗ 38.

#### Start-up volume:

With this setting, the maximum volume when switching on the unit can be set.

#### External In:

An external source (e.g. hands-free kit) can be connected to the Infotainment system.

With **External In** the volume of an external source can be set in addition to the volume of the audio sources.

The external source is relayed automatically by means of a control signal from the connected unit.

**AUX In:**

With this setting, the sensitivity of the Aux input can be adjusted to the volume of the external unit.

## Radio

Usage .....	22
Station search .....	24
Autostore lists .....	26
Radio data system (RDS) .....	26

## Usage

### Activating the radio mode

For CD mode and when displaying the CD menu:

Press the **AUDIO** button.

The display shows the radio menu and the last station selected will be played.

If the station is stored under one of the memory locations, the memory location number is displayed before the station name or the reception frequency.

If you are in one of the other menus (e.g. navigation, settings, etc.):

Press the **AUDIO** button once.

The display shows the radio menu and the currently selected audio source (in this case, CD) will be played.

Press the **AUDIO** button again.

The audio source is changed.

### Selecting a waveband

The Infotainment system provides two wavebands: FM and AM. In addition, each of the wavebands has an autostore memory location (AS) where stations can be automatically stored ⇄ 26.

To change the waveband, proceed as follows:

In the radio menu:



Select the **Return** menu item.

The **Audio** menu is displayed.



Select the desired waveband, **FM** or **AM**.

The radio menu is displayed.




The autostore levels are accessed using the **Extras** menu item ↪ 26.

The following functions are available in the radio menu:

- **◀ and ▶**: automatic search upwards or downwards.
- **Station**: selecting a station from the station list.
- **Store**: storing the currently selected station under one of the memory locations 0 ... 9.
- **Manual**: enabling manual search.
- **Extras**: see below.

### Extras

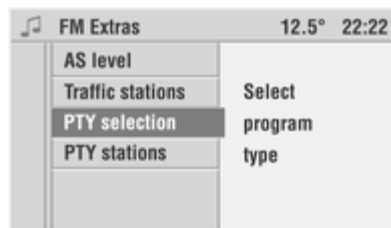

The following options are available in the **Extras** submenu:

#### AS level

This option is used to change to the autostore level of the current waveband.

Detailed information about the autostore function ↪ 26.


#### Traffic stations

This function is used to select one of the traffic stations currently receivable.

#### PTY selection (FM only)

Many RDS stations ↪ 26 transmit a PTY code that indicates the type of programme being broadcast (e.g. news). The PTY code enables selection of the station according to programme type.

After selecting the **PTY selection** menu item the list of selectable programme types appears.

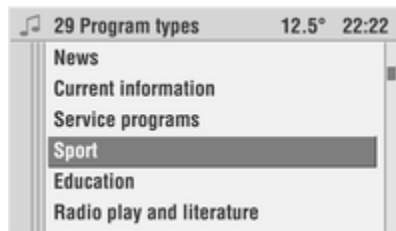

Select the desired programme type from the list.


A list of the receivable stations of the selected programme type is displayed.

Select the desired station from the list.

If no corresponding station is found, **No station available** is displayed and the previously selected station will be played.

#### **PTY station** (FM only)

After selecting the **PTY station** menu item a list of all stations with a valid programme type is displayed.

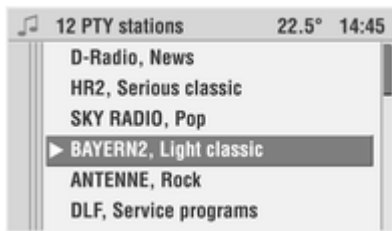

Select the desired station from the list.

Some stations will also change the PTY code depending on the broadcast content.

## **Station search**

### **Automatic search**

Using the radio menu:

Select the **|◀** or the **▶|** menu item in the radio menu.

Using the rocker switch: briefly press search button **◀** or **▶**.

The Infotainment system will tune to the next receivable station.

If RDS or traffic programmes (TP) are switched on, the search searches only for stations transmitting RDS or traffic programme signals. RDS  
 ⇨ 26; Traffic programme (TP)  
 ⇨ 26.

If no station is found, the Infotainment system automatically switches to a more sensitive search level.

Press search button **Δ** or **∇** once, or repeatedly to set the frequency step-by-step.

### **Station list**

To recall a station stored under one of the memory locations 0 to 9 (station buttons):

Select the **Station** menu item in the radio menu.

The station list of the current waveband AM or FM is displayed.

Select the desired station from the station list.

**In the FM waveband only:**



The Infotainment system will additionally create a list of all receivable stations of the current reception area.

The stations stored under the memory locations 0 ... 9 are displayed at the start of the station list. Below these you will find all currently receivable stations.

Select the **Update stations** menu item to update the station list.

The stations stored under the memory locations 0 ... 9 are not overwritten during this update. The Infotainment system's station list is kept up to date constantly.

### Station memory

In each waveband, 10 stations (radio programmes) can be stored under memory locations 0 to 9.

The memory locations can be selected using the number buttons 0 to 9 or using the **Station** menu item in the radio menu.

### Storing stations using the radio menu

Tune to the desired waveband and station.

Select the **Store** menu item in the radio menu.

Select the position in the station list where the set station is to be stored.

### Storing stations manually

Tune to the desired waveband and station.

Press and hold the number key where the selected station is to be stored (0 to 9).

The radio mutes briefly and displays the station previously stored at this location.

As soon as the set station becomes audible again, the station is stored under this memory location.

The selected memory location appears in the display.

### Recalling stored stations

Recall the desired memory location 0 to 9 using the number keys 0 ... 9, or:

select the desired station from the station list using the **Station** menu item.

### Manual tuning

Stations for which the frequencies are known can be set in this way.

Using the radio menu:

1. Select the **Manual** menu item.  
Depending on the selected waveband **FM Manual** or **AM manual** is displayed in the top display line.  
The frequency range of the set waveband is displayed and the pointer shows the currently set reception frequency.
2. Turn the multifunction knob clockwise to gradually increase the reception frequency.
3. Turn the multifunction knob anti-clockwise to gradually reduce the reception frequency.
4. Press the multifunction knob to confirm the set reception frequency and exit manual frequency tuning.

Using the rocker switch:

### Rough tuning

Press and hold search button  $\Delta$  or  $\nabla$  until the frequency of the required station is almost reached.

### Fine tuning

Press search button  $\Delta$  or  $\nabla$  repeatedly until the exact station frequency appears in the display.

## Autostore lists

### Autostore (automatic storing)

The station with the strongest signal in your current reception area is found in this way.

Select the **AS level** menu item in the **AM Extras** or the **FM Extras** menu.

The Infotainment system automatically switches to the autostore level of the selected waveband (AM-AS or FM-AS).

This is indicated by the AS symbol in the main display.

Select the **Autostore** menu item in the **AM AS** or the **FM AS** radio menu.

The automatic search is started, the frequencies of the 10 strongest stations from the current reception area are stored in the AS memory locations.

Previous stations stored in the AS memory locations are overwritten.

RDS is activated during automatic storage in the FM waveband and then remains active.

If TP is switched on before automatic storage, the Infotainment system calls up a memory location containing a traffic information station when the station search ends.

If TP is switched on during automatic storage, the search remains active until at least one automatically stored TP station has been found

The memory locations of the autostore level may also be stored manually  $\rightarrow$  24.

### Returning to FM or AM level

Select the **Extras** menu item in the **AM AS** or the **FM AS** radio menu.

Select the **FM level** or **AM level** menu item to return to the FM or AM memory level.

## Radio data system (RDS)

RDS is a European service provided by broadcasting companies, which makes finding the required FM programme much easier and aids good reception.

When the RDS function is switched on, RDS stations are recognised by the fact that the programme name is displayed instead of the station frequency.

RDS stations transmit information which is automatically evaluated by the RDS radio, or when the RDS function is active.


RDS and the REG and TP functions associated with RDS can be set in the audio **Settings** menu:

### Audio settings

Press the **AUDIO** button to recall the **Audio** menu.

Press the **SETTINGS** button.

The audio **Settings** menu appears.

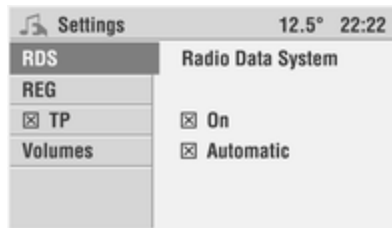

The following settings can be made:

### RDS

The **RDS** submenu allows you to influence the behaviour of the radio in the FM waveband.

There are now two options for influencing the RDS behaviour of the Infotainment system:

#### Automatic RDS

Activate **Automatic**.

- This function ensures that the radio treats RDS stations as if RDS had been activated even when RDS is switched off (functions like PS, AF, PTY, etc. are active).

- The automatic search does not respond to non-RDS stations.

#### RDS always activated

Select **On** to activate RDS.

Activating RDS provides the following advantages:

- The Infotainment system will only tune to RDS stations when searching automatically.
- The display shows the programme name of the set station instead of the frequency.
- The Infotainment system always tunes to the frequency with the best reception for the selected radio programme using AF (alternative frequency).

#### Switching off RDS

Deselect **On** and **Automatic**.

The frequency now appears in the display instead of the programme name.

The radio no longer automatically selects the frequency with the best reception for a programme.

#### REG (Regional programmes)

Some RDS stations transmit different regional programmes over different frequencies at certain times.

(RDS must be activated)

In the audio **Settings** menu: Select the **REG** menu item.

The regionalisation menu appears.

There are three options for influencing the behaviour of the Infotainment system with regard to regional programmes:

#### Automatic REG

When searching for the frequency with the strongest reception (AF) of a radio programme, the Infotainment system remains tuned to the selected regional programme until good reception is no longer possible.

If the reception quality of the selected regional programme no longer provides good reception, the Infotainment system will switch to another regional programme.

### REG On

When searching for the frequency with the strongest reception (AF) of a radio programme, the Infotainment system always remains tuned to the selected regional programme.

### REG Off

When searching for the frequency with the strongest reception of a radio programme, the Infotainment system also considers regional programmes.

If **Automatic REG** or **REG On** is activated, the **REG** symbol is shown in the display.

### TP (Traffic programme)

Activate this menu option to listen to traffic announcements.

Traffic stations can be recognised by the **TP** symbol in the display.

### Switching on TP

Using the audio **Settings** menu:

Activate the **TP** option in the audio **Settings** menu.

Using the function key:

Press the **TP** button.

The [ ] symbol appears in the display.

If the current station is a traffic station, **[TP]** is shown in the display.

Only TP stations are received.

If the current station is not a traffic station, the unit will automatically search for the next traffic station.

When the TP function is switched on, CD/MP3 CD playback is interrupted for a traffic announcement.

Traffic announcements are heard at the preset TA volume ↻ 20.

During a traffic announcement the message **Traffic announcem.** will appear in the display.

### Switching off TP

Press the **TP** button,

or:

switch off TP using the **TP** menu item in the audio **Settings** menu.

[ ] disappears from the display.

During a traffic announcement:

Press the **TP** button twice to switch off TP.

### Hearing traffic announcements only

Switch on TP.

Reduce the volume to zero.

Or:

Press and hold the **OI** knob to mute the Infotainment System.

Traffic announcements are heard at the preset TA volume ↻ 20.

### Deactivating traffic announcements

To deactivate an unwanted traffic announcement, e.g. during CD/MP3 playback:

Press the **TP** button once during the traffic announcement,

or:

Press the **AUDIO** button once.

The traffic announcement is interrupted.

TP remains switched on.

### Setting the volume of traffic announcements

The volume of traffic announcements (TA volume) can be set in the audio **Settings** menu ↻ 20.

**Traffic station list**

In the **AM Extras** and **FM Extras** radio menus, you can use the **Traffic stations** menu item to call up one of the currently receivable traffic stations directly without having to do a lengthy search.

**EON (Enhanced Other Networks)**

With EON, you can also hear traffic announcements if the station set is not transmitting its own traffic programme. If you have set a station of this type, the **TP** symbol is displayed as for traffic stations.

## CD Player

General information .....	30
Usage .....	31

### General information

The Infotainment system is equipped with a CD player that can play audio CDs as well as MP3 CDs. The CD player will automatically recognise the CD type.

#### Caution

Under no circumstances place DVDs, single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the drive. An expensive replacement of the device will then be necessary.

- The format of the CD must be ISO 9660 Level 1, Level 2 or JOLIET. All other formats cannot be played back reliably.
- Audio CDs with copy protection, which are not in compliance with the audio CD standard, may not play correctly or not at all.
- Self-recorded CD-Rs and CD-RWs are more vulnerable to mishandling than prerecorded CDs. Correct handling, especially in the case of self-recorded CD-Rs and CD-RWs, must be ensured. See below.
- Self-recorded CD-Rs and CD-RWs may not play correctly or not at all. In such cases it is not the equipment that is at fault.
- With mixed mode CDs (combination of audio and data, e.g. MP3) only the audio tracks are recognised and played back.
- Avoid leaving fingerprints when you change CDs.
- Put CDs back in their sleeves immediately after removing them from the CD player in order to protect them from damage and dirt.
- Dirt and liquids on CDs can smear the lens of the CD player inside the device and cause faults.
- Protect CDs from heat and direct sunlight.
- The following restrictions apply for data stored on an MP3 CD:

When naming albums and tracks, umlauts or special characters should not be included.

Applicable playlist extensions: "m3u" or "pls".

When generating (coding) the MP3 files from audio data, a bitrate of up to max. 256 kbit/s should be used.

To use MP3 files in the Infotainment system, the MP3 files must have the file extension ".mp3".

## Usage

### CD/MP3 playback

#### Inserting a CD



Insert a CD with the printed side up into the CD slot until it is pulled in.

CD playback begins.

**CD in** is displayed.

If an MP3 CD is inserted, **MP3** is also displayed.

Depending on the complexity of the file structure and the number of MP3 files on the CD, reading may take some time.

If a CD is already inserted in the audio CD slot:

Press the **AUDIO** button once.

The **CD** menu appears in the display.

CD playback begins.

If a menu other than the **Audio** menu is displayed (e.g. **Navigation**, **Settings** or the **Main** display):

Press the **AUDIO** button once to display the **Audio** menu.

Press the **AUDIO** button again to switch to CD playback mode.

- The number of the current track and the elapsed track time is displayed.

- If the inserted audio CD has CD text, the album title, name of the current track and artist are displayed. For this purpose, CD text display must be activated, see below "Show title".

- For MP3 CDs, the track name (ID3 tag) of the current piece of music is displayed. For this purpose, track display must be activated, see below "Show title".

If there is no track name, only the file name is displayed.

#### Direct track selection

In the **CD** menu:

Select the **Track** menu item.

The list of the tracks available on the CD is displayed.

Select the desired track from the list.

#### Skipping to the next track or previous track

Briefly press the rocker switch ◀ or ▶,  
or:

Select the **|◀ or ▶|** menu item in the **CD** menu.

### Fast forward or rewind

Hold down the rocker switch **◀** or **▶** for more than 1 second,

or:


select the **◀◀** or **▶▶** menu item in the **CD** menu.

Fast forward/rewind takes place.

During fast forward/rewind the track is played at a higher speed and reduced volume.

To stop the fast search using the menu, select the **◀◀** or **▶▶** menu item again.

### CD Extras

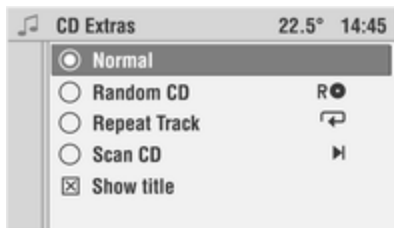

Various further functions for CD/MP3 playback can be set using the **CD Extras** menu.

Select the **Extras** menu item in the **CD** menu.

The following functions can be selected:

#### Normal

CD/MP3 tracks are played in their normal sequence.

All tracks on an MP3 CD are sorted and played in alphabetical and numerical order in this mode.

#### Random CD

The tracks are played in random sequence.

The **R ●** symbol appears in the display.

To exit the random function, select **Normal** from the **CD Extras** menu.

#### Random Album

The MP3 tracks in the current album (directory) are played in random order.

This function is available only with an MP3 CD.

The tracks on the album selected are played back in random order.

The **R ●** symbol appears in the display.

To exit the random function, select **Normal** from the **CD Extras** menu.

#### Repeat track

The current CD/MP3 track is repeated until you select a different mode.

The **↺** symbol appears in the display.

To exit the repeat function, activate **Normal** in the **CD Extras** menu,

or:

Press and hold the rocker switch **∇**.

You can also switch the repeat function on and off by pressing and holding the rocker switch **∇**.

#### Scan CD

All tracks on the CD are played briefly.

The **▶ |** symbol appears in the display.




To listen to the complete currently selected track and exit the scan function, activate **Normal** in the **CD Extras** menu,

or:

press and hold the  $\Delta$  button.

You can also switch the scan function on and off by pressing and holding the  $\Delta$  button.

### Show title

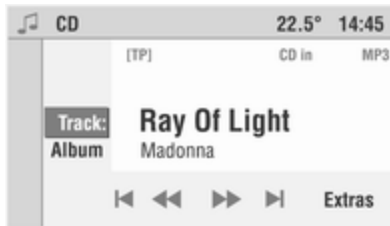

Activate this function if the Infotainment system is to display the name of a track instead of the elapsed track time.

### Selecting MP3 albums or playlists

If your MP3 CD is made up of a number of albums (directories), you can select these as follows:

Tap the rocker switch  $\nabla$  or  $\Delta$  repeatedly until the album appears in the display.

or using the **CD** menu:

Select the **Album** menu item.

The list of albums available on the CD is displayed.

The first track on the album will be played.

Select the album.

To avoid long access times a maximum of 20 albums should be used.

The name of the currently selected directory is displayed as the album title.

Directories without MP3 files are automatically skipped.

### Removing a CD

Press the  $\triangle$  button.

The CD is pushed out of the CD slot.

If the CD is not removed after ejection, it will be pulled back in again automatically after a few seconds.

## AUX input

Usage ..... 34

### Usage

To play back an audio source connected to the AUX input of the vehicle, e.g. a portable CD player, via the Infotainment system loudspeakers, the audio source has to be enabled:

The connector is located in the area of the centre console.

Always ensure that the AUX input remains clean and dry.

1. Connect the audio source to the AUX input of your vehicle.
2. Press the **MAIN** button.
3. Select the Audio function in the main display.
4. Press the multifunction knob.
5. Select the **Return** menu item.



6. Select the **AUX** menu item.
  - The external audio source is switched through to the Infotainment system.
7. Switch on the external audio source and set it to the maximum volume.
  - The audio source signal is then played back via the loudspeakers of the Infotainment system.
  - If distortion occurs during playback of the external source, reduce the volume level of the external unit until distortion is no longer present.

**Caution**

When switching between the various audio sources, take account of the different volumes in radio, CD and AUX mode. Reduce the volume before switching.

## Navigation

General information .....	36
Usage .....	38
Destination input .....	44
Guidance .....	57
Dynamic guidance .....	61
Maps .....	63
Symbols overview .....	66

### General information



The navigation system will reliably guide you to your destination without the need to read maps, even if you have no local knowledge whatsoever.

The current traffic situation is taken into account in the route calculation if dynamic route guidance is used. For this purpose the Infotainment system receives traffic announcements in the current reception area via RDS TMC.

The navigation system cannot, however, take into account traffic incidents, traffic regulations changed at short notice and hazards or problems that arise suddenly (e. g. road works).

### Caution


The usage of the navigation system does not release the driver from the responsibility for a correct, vigilant attitude in road traffic. The relevant traffic regulations must always be followed. If a navigation instruction contradicts traffic regulations, the traffic regulations always apply.

### Functioning of the navigation system

The position and movement of the vehicle are detected by the navigation system using sensors. The travelled distance is determined by the vehicle's speedometer signal, turning movements on bends by a gyro sensor. The position is determined by GPS satellites (Global Positioning System).

By comparing the sensor signals with the digital maps on the navigation DVD/CD, it is possible to determine the position with an accuracy of approx. 10 m.

The system will also work with poor GPS reception, however, the accuracy of the determination of the position will be reduced, resulting in incorrect position messages.

Poor GPS reception is indicated by the  symbol in the main display.

After the entry of the destination address or point of interest (nearest petrol station, hotel, etc.) the route is calculated from the current location to the destination selected.

The route guidance is provided by voice output and an arrow, as well as with the aid of a multi-colour map display or a combination of both.

## Important information on map DVDs/CDs

### Caution

Under no circumstances place DVDs, single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the drive. An expensive replacement of the device will then be necessary.


- Only use map DVDs/CDs approved by the vehicle manufacturer. The Infotainment system will not read map DVDs/CDs from other manufacturers.
- Never insert navigation DVDs into the audio CD slot. DVDs may become jammed in the CD player. The unit will then have to be exchanged at your expense.

- It is recommended to always use the latest map DVD/CD approved by the vehicle manufacturer for the Infotainment system.
- CD 70 NAVI only: The European trunk road network and the major European cities are stored on all navigation CDs.  
DVD 90 NAVI only: The detailed road network of all countries displayed in the destination input is stored on the navigation DVD. It is not necessary to change DVD when crossing borders.
- For more information on navigation DVDs/CDs, we recommend you contact a Vauxhall Authorised Repairer.
- Avoid leaving fingerprints when you change map DVDs/CDs.
- Put map DVDs/CDs back in their sleeves immediately after removing them from the Infotainment system in order to protect them from damage and dirt.

- Dirt and liquids on map DVDs/CDs can smear the lens of the DVD/CD player inside the device and cause faults.
- Protect map DVDs/CDs from heat and direct sunlight.

## Usage

### Activating the navigation system

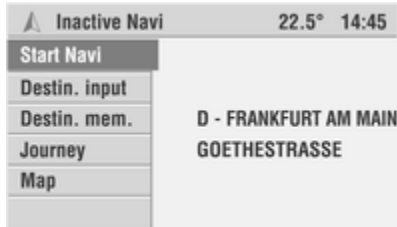

Press the **NAVI** button.

or:

Select the **▲** function in the main display and confirm the selection.

If navigation is inactive:

The Navigation main menu is displayed. The last destination address entered is displayed.

If navigation is active:

Depending on the previously selected display type, the guidance screen shows the directional arrow, the navigation map or the split screen with directional arrow and navigation map.

### Inserting navigation DVD/CD

Push the navigation DVD/CD, label side up, into the DVD/CD slot until it is pulled in automatically.

### Removing a map DVD/CD

Press the **⌂** button. The DVD/CD is pushed out of the DVD/CD slot.

If the DVD/CD is not removed after ejection, it will be pulled back in again automatically after a few seconds.

### Setting the language

You can change the language of navigation prompts **↻** 11.

## Navigation settings



If you are not yet in the navigation function:

Press the **NAVI** button to switch to the navigation function.

Press the **SETTINGS** button.

The **Settings** menu for the navigation is displayed.

The following settings can be made:

### Route class

This submenu allows you to influence the behaviour of the navigation system when a route is being calculated.

The following options are available:

**Fastest** ☹

When calculating the route the fastest route is given preference.

**Shortest** 

When calculating the route the shortest route is given preference.

**Motorway** 

When calculating the route, motorways and expressways are given preference.

**Secondary roads** 

When calculating the route, secondary roads are given preference.

**Route options**

In addition to the route type, you can activate the following options for route planning:

**Toll-free** €

When calculating the route, toll roads are avoided.

**No tunnels** 

When calculating the route, tunnels are avoided.


**No Ferries** 

When calculating the route, ferry connections are avoided.

If no connections exist for the route being calculated without the exclusion criteria selected above, the navigation system will, if necessary, use toll roads, ferries or tunnels as well.

In this case, you will be given a corresponding message by the Infotainment system.

**Dyn. Guidance** 

When calculating the route, the navigation system takes into account the current traffic situation reported via RDS TMC.  61

The corresponding symbols for route class, avoidance of toll roads and dynamic guidance are shown in the main display.

**Map options**

This submenu allows you to influence the display of the navigation map.

The following options are available:

**Head up**

The map is displayed in the direction of travel. This display type can only be activated if the scale is 100 m to 10 km.

**Centered**

The map is displayed in such a way that the vehicle position is always in the centre of the display.


With this type of display the map is always North up.

**North up**

The map is displayed with North at the top.

With this type of display the display of the map is static. Only when the vehicle position reaches the edge of the map is the map moved and redrawn.

**Show POIs**

Select which category of POIs are to be displayed as symbols in the map display (e.g. hotels, petrol stations, tourist attractions, etc.). Symbols overview  66.


### Delete lists

This submenu allows you to delete the entries in the following lists.

- Addressbook
- Last destinat.
- Home
- Tour memory

Highlight the desired lists and then select the **Delete** menu item.

### Navi announcement

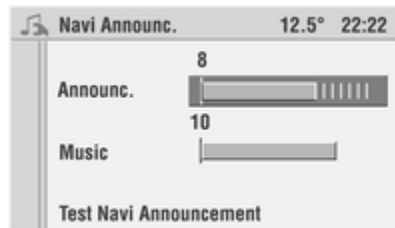


Using this setting you can change the volume of navigation announcements.

Select the **Announc.** menu item and adjust the minimum volume of voice information.

Select the **Music** menu item to set the volume of the music during voice information.

Select the **Test navi announcement** menu item to test the selected setting.

If the value for **Announc.** is set to 0 there is no voice output and the main display shows the  symbol.

### Extras

This submenu allows you to make the following settings for guidance:

#### Pop-up info

Select whether the popup info is active or inactive. If the pop-up info is active, the navigation screen is displayed automatically just before a navigation message.

#### Driving time / Arrival time

Choose between the display of the remaining driving time or the arrival time.

The Infotainment system bases the driving time and arrival time on an average speed. These times may therefore vary depending on driving style and traffic volume.

To show the remaining driving time or arrival time, press the **INFO** button while navigation is active.

### Detailed arrows

Choose from a simplified display of guidance information or a display with early warning, distance bar and detailed junction display.

### Information on navigation

Press the **INFO** button to display the **Info** menu.



Select the **NAVI** menu item in the **Info** menu.




▲ Info	22.5° 14:45
TMC map	Traffic
TMC info	announcement:
<b>TMC Settings</b>	
Position	Infotype, filtering
Destinat.	sorting criteria,
Route list	traffic stations

The **Info** menu for the navigation is displayed.

The following detailed information on navigation is available:

### TMC map

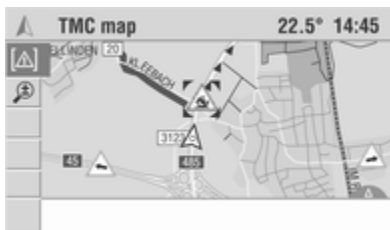

Traffic messages which the Infotainment system is currently receiving via RDS TMC can be displayed on the **TMC map** as symbols. In addition, detailed information on each of the traffic problems displayed on the map can be recalled.

Select the **TMC map** menu item.

The position map with the traffic problems signalled via RDS TMC is displayed.

- For RDS TMC traffic information to be displayed, a navigation DVD/CD must be inserted in the Infotainment system.
- RDS TMC reception is guaranteed only if the **TMC** symbol appears in the display.

### Depiction of TMC symbols

The TMC symbols are displayed differently depending on the scale of the map:

- Map scale larger than 10 km: The traffic hold-ups are displayed as triangles with a directional arrow. The arrow indicates the travel direction of the road obstruction.
- Map scale of 10 km and smaller: The symbol indicates the type of traffic hold-up (e. g. accident, roadblock). The road section affected is marked with arrows. Symbols overview ⇨ 66.

### Colours of the TMC symbols


Additional information is provided by the colour of the TMC symbols:

- Yellow: Traffic problems on the planned route that would cause a negligible delay.
- Red: Traffic problems on the planned route that would cause a severe delay.

- Green: Traffic problems that are bypassed by a global detour using dynamic guidance.
- Grey: Traffic problems that are not on the planned route or that are bypassed by a local detour.


The basis for the possible delay due to a traffic hold-up and calculated by the Infotainment System is data that the system receives via the currently selected RDS-TMC station. The actual delay may deviate from the calculation. Red: Traffic problems on the planned route.

### Changing map scale

Select the **Scale**  menu item or the symbol in the menu bar. Change the scale by turning the multifunction knob, then confirm the value set.

### View TMC messages in detail

Move the cursor (bracket) to the desired TMC symbol in the map using the rocker switch.

In the menu bar, select the **Symbol** menu item or the  symbol.

Detailed information on the selected traffic information and the calculated delay are displayed.

### TMC info



Select the **TMC** menu item in the **Info** menu.

The traffic information broadcast by the currently received RDS TMC station is displayed in short form in a list.

- Only messages which are activated as Info type in the **TMC Settings** menu and correspond to the filtering set are displayed see below: "TMC settings".

- For RDS TMC traffic information to be displayed, a navigation DVD/CD must be inserted in the Infotainment system.
- The **TMC** symbol in the display shows RDS TMC reception.

### View TMC messages in detail

Select the desired list entry.

Detailed information on the selected traffic information is displayed.

The list of traffic messages can also be accessed using the **TMC info** menu item in the **Info** menu for the navigation.

### TMC settings

This submenu allows you to set the parameters for TMC messages.

The following options are available:

#### Info type

Select which type of traffic message is to be displayed.

The first list entry **Info types** enables you to switch all message types on or off simultaneously.

Info types that are not active are not announced and are not shown in the message list or the map display.

Urgent hazard warnings cannot be deactivated.

### Filtering

Select which type of TMC traffic message is to be displayed:

- **All:** All traffic messages received via RDS TMC are displayed.
- **Route:** All traffic messages on the current route are displayed.
- **Current position:** All traffic messages for the area around the current vehicle position are displayed.
- **Vicinity destination:** All traffic messages within 50 km of the current destination input are displayed

To view TMC messages, press the **INFO** button and then select the **TMC** menu item.

### Sorting criterion

Select the criterion for sorting the list of TMC traffic messages:

- **Distance:** Traffic messages are displayed sorted based on distance from the current location or from the destination (depending on the setting in the "Filtering" category).
- **Street name:** Traffic messages are displayed sorted based on road names.

### TMC station

This submenu allows you to select the station to be used for TMC traffic information.

If **Automatic** is active, the Infotainment system automatically selects the RDS TMC station with the strongest signal.

If the manually selected RDS TMC station can no longer be received (e.g. because you have driven out of the station's reception range), the Infotainment switches automatically to **Automatic** and searches for an RDS TMC station to ensure that traffic messages are available.

### Position

Shows your current vehicle position with city, road and geographical coordinates. With adequate GPS reception the altitude above sea level is also shown.

The accuracy of the altitude display depends very much on the quality of GPS reception.

Select the **Save** menu item to save your current vehicle position in the address book.

### Destin. info

Shows the position of the current destination with city, road, geographical coordinates and remaining distance and time to travel or arrival time.

### Route list

Shows the route with all the roads to be used and their distances to the current destination.

## Destination input

The following options for destination input are available:

- **Destin. Input:** To input a new destination address with country, city, road, number or corner.
- **POIs:** Selection of special destinations (restaurants, hotels, etc.)
- **Destination mem.:** To select a destination from the address book, the list of destinations last used or to load the home address.
- **Entering destinations via the map:** To input a destination using a cursor on the navigation map, ⇨ 63.

### CD 70 NAVI only:

In the event that the destination is in a different country, it might not be stored on the current navigation CD. In this case, you should first input a larger city near the destination which is stored on the CD. After you have reached this city, insert the navigation CD of the destination country and input the destination town.

### Entering an address using the speller function



Characters for navigation are entered by selecting letters from a list of letters, digits and special characters.

When you enter a town or road name, for example, an input menu will appear. In the following, it will simply be called “typewriter”.

Move the cursor to the desired character by turning the multifunction knob.

The currently selected character is highlighted.

Confirm the selection by pressing the multifunction knob.

The selected character will be transferred to the input field.

### Intelligent “typewriter”

When you enter destinations, the system compares the character string already entered with all database entries on the navigation DVD/CD. Once you select a character, you will notice that only certain letters remain displayed.

Only those characters can be selected on the “typewriter” that can be used to further determine the name.

The Infotainment system automatically completes entries with the possible further characters.

### Deleting characters

When you have entered the wrong character:

Select the **◀C** menu item in the "typewriter".

The last character selected is deleted.

If the Infotainment system has automatically completed characters, these characters are also deleted again.

### Cancelling character entry

Turn the multifunction knob anti-clockwise until the hidden menu item **Cancel** is displayed.

Select **Cancel** to finish entering characters.

The **Destin. Input** menu is displayed.

### List

The **List** menu item in the "typewriter" can be selected when inputting destinations. Depending on the

previously input character sequence, the maximum number of remaining list entries is displayed behind the menu item.

When entering a character or a character combination the number of inputs in the list is reduced.

If there are fewer than 7 entries in the list, the selection list is automatically displayed.

### Cancelling list selection

Turn the multifunction knob anti-clockwise until the hidden menu item **Return** is displayed.

Select **Return** to cancel the list selection.

The "typewriter" is displayed.

### "Typewriter" for name input



In addition to upper case letters, numbers and special characters, lower case letters are also available for entering names (addresses in address book, tours, etc.).

In addition, you also have the option of editing a name during the input using a movable cursor.

Select the **abc** or **ABC** menu item to enter lower case or upper case letters, respectively.


Select **Abc** if the first letter of entries is to be automatically written in upper case.

Select **#&|** to enable special characters to be entered.

Press ◀ or ▶ to move the cursor back and forth within the text already entered.

Select **OK** to finish entering text.

## Destin. Input

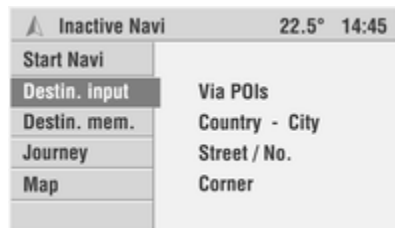

### If navigation is inactive:

In the Navigation menu, select the **Destin. Input** menu item.

The **Destin. Input** menu is displayed.

### With Colour Info Display and active navigation:

Select the **Menu** menu item in the guidance screen.

Select the **Destin. Input** menu item.

You can now enter the destination address with the following information:


### Country

Select the **Country** menu item in the **Destin. Input** menu.

The list of the countries stored on the navigation DVD/CD is displayed.

Select the required country from the list.

If a destination address has already been entered, the country ID of the destination country is displayed instead of the **Country** menu item, e.g. **D** for Germany.

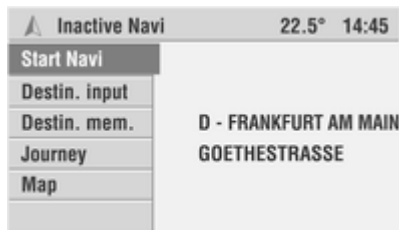

### CD 70 NAVI only:

If you select a country that does not correspond to the inserted country CD you can only enter the major European cities and the most important trunk roads as a destination.

To be able to enter an exact destination, insert the country CD of the destination country as soon as you have crossed the border.

### Town



Select the **Town** menu item in the **Destin. Input** menu.

If a destination address has already been input, the town name of the last destination entered is displayed instead of the **Town** menu item.

The “typewriter” for entering characters is displayed.

Enter a new city name by selecting the letters on the “typewriter”.

When the number of possible entries in the town list is small enough, the selection list with town names will be automatically displayed.

Select the desired town from the list.

### Street



Select the **Street** menu item in the **Destin. Input** menu.

If a destination address has already been input, the road name of the last destination entered is displayed instead of the **Street** menu item.

The “typewriter” for entering characters is displayed.

Enter a new road name by selecting the letters on the “typewriter”.

When the number of possible entries in the road list is small enough, the selection list with road names will be automatically displayed.

Select the desired road from the list.

### House number

If house numbers for the entered road are stored on the inserted navigation DVD/CD you can enter a house number for the destination.

Select the **No.** menu item in the **Destin. Input** menu.

If a destination address has already been input, the house number of the last destination entered is displayed instead of the **No.** menu item.

The “typewriter” for entering characters is displayed.

Enter the house number by selecting one of the preset digits on the “typewriter”.

- Within the database, certain ranges of house numbers are combined, the entered house number being in such a range. In such a case, the navigation system will lead you to the entered house number range.

- In some cases, the navigation system will also correct your entry. If for example you have entered house number 83 but only numbers up to 51 are stored on the navigation DVD/CD, the system will automatically correct this to 51.

### Corner

As an alternative to the house number you can also enter an intersecting road (corner) for the destination.

Select the **Corner** menu item in the **Destin. Input** menu.

If a destination address has already been input, the road name of the last destination entered is displayed instead of the **Corner** menu item.

Enter the road name of the intersecting road as previously described.

### Entering parts of a destination address


If you want to enter a new road, house number or a new intersecting road, just select the corresponding menu item from the **Destin. Input** menu.

### Entering locations via the postcode

If postcodes are stored on the inserted navigation DVD/CD you can enter the postcode instead of the town name when entering locations.

When the number of possible entries in the town list is small enough, the selection list with town names will be automatically displayed.

### Activating guidance

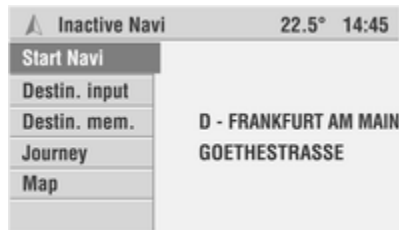


In the main menu:

Select the **Start navi** menu item to start guidance.

The **Destin. Input** menu is displayed and the route will be calculated (this may take several seconds).

Guidance ↷ 57.

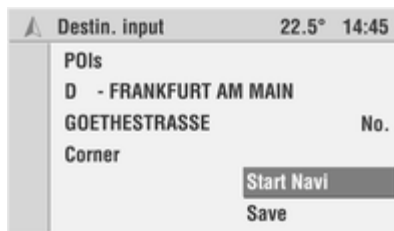

In the **Destin. Input** menu:

Select the **Start navi** menu item to start guidance.

You can save the destination entered in the address book using the **Save** menu item.

### Entering a point of interest (POI)




Interesting or useful special destinations along the route or for the destination location can be selected. For this, the Infotainment system offers various categories in which important addresses are stored:

Select the **POIs** menu item in the **Destin. Input** menu.

The **Select POIs** menu is displayed.

If a POI has already been entered as a destination address, the name of the last destination input is displayed.



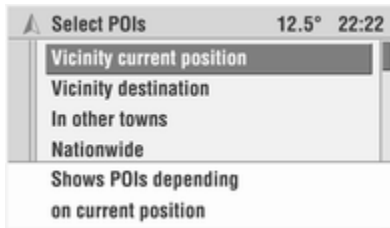

You can now select POIs according to the following criteria:

- **Vicinity current position:** Shows you POIs depending on your current position.
- **Vicinity destination:** Shows you the POIs at the selected destination.
- **In other towns:** Shows you POIs in the town of your choice.
- **Nationwide:** Shows you POIs of nationwide importance (e.g. airports, ferries, etc.).

Select one of the two selection criteria.

The list of possible categories is displayed (e.g. car rental, hotel, town centre, etc.).

Select the desired category.

A list of POIs of the selected category is displayed.

- If more than six POIs are available for the selected category, the “typewriter” will be displayed.
- When selecting **Vicinity current position** a list of at most 45 points of interest in the selected category is always displayed, sorted based on distance from current location.

With open typewriter:

- Limit the number of destinations by entering one or several initial characters or select the **List** menu item.
- Select the required destination from the list.

When list is displayed:


Select the required destination directly from the list.

After a destination has been selected, the **Destin. Input** menu will be displayed again. The top lines show the destination selected and the destination town.

### Special case for In other towns

Enter the desired location for which the available POIs are to be listed using the “typewriter”.

### Destination mem.

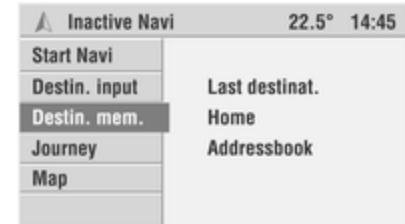

The destination memory of the Infotainment system allows you to store destinations that you would like to use more frequently for guidance.

In addition, the destinations last used for guidance are stored in the destination memory.

### If navigation is inactive:

From the Navigation menu, select the **Destination mem.** menu item.

The destination memory list appears.



#### With Colour Info Display and active navigation:

Select the **Menu** menu item in the guidance screen.

Select the **Destination mem.** menu item.

The destination memory list appears.

The destination memory list has the following entries available:

- **Last destinat.:** The list of destinations last used for guidance is displayed.
- **Home:** Recalls the stored home address.
- **Addressbook:** All addresses that are already stored in the address book (in alphabetical order).

#### Selecting one of the last destinations

Select the **Last destinat.** menu item in the **Destination mem.** menu.

The list containing a maximum of 30 last destinations for which a route was calculated is displayed.

Select the required destination from the list.

Select **Start navi** to start guidance, or:

select **Delete** to delete the selected destination from the last destinations list.

#### Selecting home address as destination

1. Select the **Home** menu item in the **Destination mem.** menu.
2. Select **Start navi** to start guidance, or:  
select **Edit** to change the home address.
3. Regardless of which menu you are in:  
Press the **⬆** button to recall the home address.

4. Select **Start navi** to start guidance. or:

press the **⬆** button briefly twice to immediately start guidance to the home address.

If a home address has not been stored, pressing the **⬆** button automatically displays the **Home** menu.

Select **Edit** to change the home address, see below.

#### Changing home address or storing a new home address

After selecting the **Edit** menu item you can change the home address.

If no home address has been stored yet, enter the desired address.

Enter the details of the home address.

Select **Save** to save the new/changed home address in the destination memory.

### Deleting home address

The details of the home address can be deleted using the **Delete lists** menu item in the navigation **Settings** menu ↗ 38.

### Selecting destinations from the address book




In the destination memory:

Select the required destination from the destination memory list.

The address book entry with the details of the address is displayed.

Select **Start navi** to start guidance.

### Saving destinations in the address book

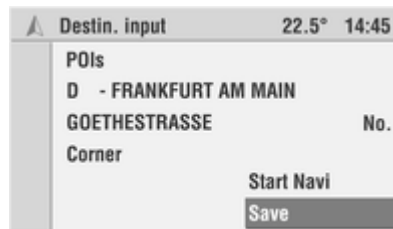

You can save up to 100 destinations (99 addresses and the home address) in the address book. The saved destinations can be individually named.

In the **Destin. Input** menu:

1. Enter the desired destination address.
2. Select the **Save** menu item.  
The “typewriter” appears.
3. Accept the specified name using **OK**,  
or:

add characters to the specified name by selecting from the character list,

or:

delete the entire specified name using ◀C and enter a new name.

4. Select **OK** to save the address under the name entered in the address book.

### Changing destinations in the address book

Select the required destination from the destination memory list.

Select **Edit** to change the selected destination address.

Change the required details (e.g. town, road, no. or the name).

Select **Save** to transfer the changed address to the address book.

### Deleting destinations from the address book



Select the required destination from the destination memory list.


Select the **Delete** menu item to delete the displayed destination from the address book.

Confirm the deletion.

The destination is deleted from the address book.

If you want to delete all saved destinations from the address book in one go, select the **Delete lists** menu item from the navi **Settings** menu, ⇨ 38.

### Tours

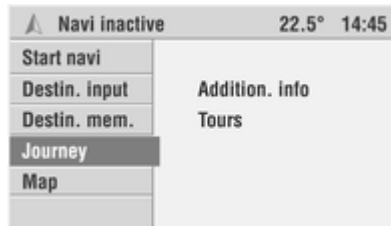

The **Tours** menu provides you with the option of driving to a series of various destinations one after the other without having to input each destination individually.

You only need to enter the individual stations of the tour once via the destination input or the destination memory and store this tour under a freely selectable name.

The tour memory can store a total of 7 tours each with a maximum of 10 stages.

#### With Colour Info Display

Select the **Journey** menu item in the Navigation menu.

Select **Tours**.

#### With Graphic Info Display

Select the **Tours** menu item in the Navigation menu.

The **Tours** menu is displayed.

#### Entering a new tour



1. Select the **Add tour** menu item in the **Tours** menu.

The “typewriter” appears.

2. Enter a name for the new tour.
3. Select **OK** to save the name entered.

This will take you automatically to the menu for editing a tour (see below).

You can now enter tour stages (intermediate destinations).

## Starting a tour



Select a tour in the **Tours** menu.

To start guidance: Select **Start tour**.

All predefined tour stages (intermediate destinations) are taken into account for route guidance.

### Skip predefined stages

If you want to skip predefined stages on the tour and start direct guidance to a certain stage:

Select **Start from**.

The list of tour stages is displayed.

Select the desired tour stage. A route is calculated that leads directly to the selected tour stage.

## Displaying a tour




With this function it is possible to view the list of tour stages (intermediate destinations) for the selected tour.

Select **Show**.

The list of tour stages for the selected tour is displayed.

If you select one of the tour stages from the list, the details of the address are displayed.


## Editing a tour

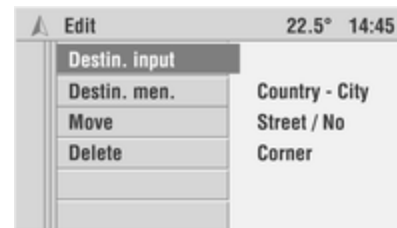

You have the following options in the **Edit** menu:

- **Destin. Input:** Add new destinations to the tour.
- **Destination mem.:** Add destinations from the destination memory to the tour.
- **Move:** Move stages within the selected tour.
- **Delete:** Delete individual stages of the selected tour or the entire tour.


### Add tour stages

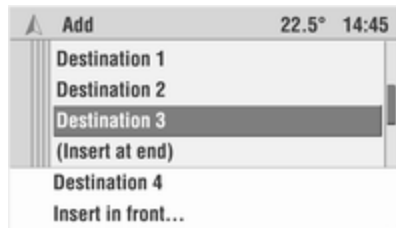

1. Select the **Destin. Input** or **Destination mem.** menu item in the **Edit** menu.
2. Enter a new destination or select a destination from the destination memory.
3. Select **Add** to add the selected destination to the tour.  
The list of stages already stored for the tour is displayed.
4. Move the cursor by turning the multifunction knob to the position in the list where the new stage is to be inserted.
5. Press the multifunction knob to place the new stage in front of the highlighted entry.

Select **(Insert at end)** if the new stage is to be placed at the end of the list.

### Move tour stages

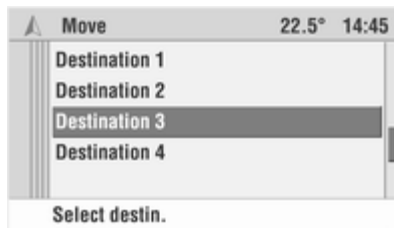

1. From the **Edit** menu, select the **Move** menu item.  
The list of tour stages in the selected tour is displayed.
2. Highlight the stage to be moved using the cursor.
3. Press the multifunction knob.
4. Move the cursor by turning the multifunction knob to the position in the list where the new stage is to be inserted.

5. Press the multifunction knob to place the new stage at the selected position.

Select **(Insert at end)** if the stage is to be moved to the end of the list.

### Delete tour stages

1. From the **Edit** menu, select the **Delete** menu item.  
The list of tour stages in the selected tour is displayed.
2. Highlight the stage to be deleted using the cursor.
3. Press the multifunction knob.  
The desired stage is deleted from the tour.

### Delete entire tour

From the **Edit** menu, select the **Delete** menu item.

The list of tour stages in the selected tour is displayed.

Select the **Delete whole tour** menu item.

### Travel guide information (DVD 90 NAVI only)

The **Add. Info** function in the Travel menu provides access to travel guide information from various suppliers. Depending on the navigations-DVD inserted, different information from third-party suppliers can be retrieved. This may be hotel and restaurant guides and tourist information, for example.

A browser similar to an internet browser is used to display the additional information.

The additional information may contain text, addresses and telephone numbers.

You can transfer the address of the desired hotel to the navigation system directly from the travel guide, for example.

#### Search in additional information If navigation is inactive:

In the main menu, select **Journey**.

#### If navigation is active:

1. Select the **Menu** menu item in the guidance screen.
2. Select the **Journey** menu item.

3. In the **Journey** menu, select **Add. Info**.

The overview of additional information stored on the navigation DVD is displayed.




4. Select the desired provider from the list.

If additional information from a supplier is available, the selection is displayed directly via the search options.

5. Select the desired search option from the list.


The following can be selected:

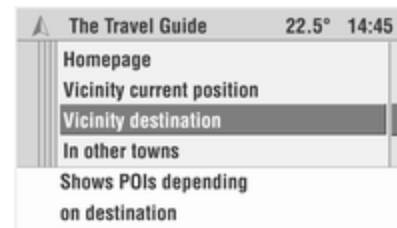


- **Homepage:** Displays the startpage for the selected supplier (if available).
- **Vicinity current position:** Displays the search screen for facilities in the vicinity of the current location.
- **Vicinity destination:** Displays the search screen for facilities in the vicinity of the destination.
- **In other towns:** Displays the search screen for facilities in the vicinity of the location of your choice.

To narrow down the search, this may be followed by a multistage query, presented in the form of lists, from which the respective subcategories can be selected (e.g. All hotels, Categories, Extras, Search by name).

## Using the browser

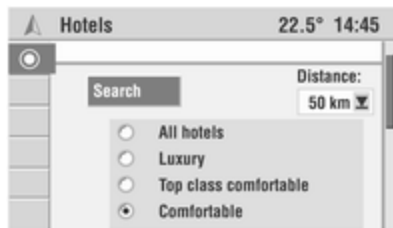

1. Use the rocker switch ◀ or ▶ to jump from one option to another.  
The selected option is then highlighted (in different ways depending on layout of search pages and supplier).
2. Press the search button ▲ or ▼ to scroll up or down page by page.
3. Press the multifunction knob to confirm the selected option or the activated link..

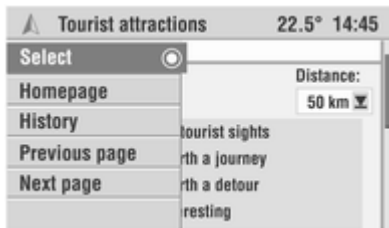

The browser also has a dynamic menu. As soon as the multifunction knob is turned, the following menu items are available:

- **Select** Ⓞ: Confirms the selected option.
- **Homepage**: Goes to the overview page for the selected supplier (if available)
- **History**: Displays the list of previously viewed pages.
- **Previous page**: Retrieves the previous page in the history.
- **Next page**: Retrieves the next page in the history.

## Display of the results

After you have started a search, the Infotainment displays the results of the search in the form of a list.



The results include the address of the facilities, the hit percentage and the distance from the current location.

To display detailed information on the facilities use the ⓘ symbol.


To open the next/previous page of results use the arrow symbols.

## Transfer to navigation system

In the detail view, you can transfer the selected facility to the navigation system as a new destination via the ↗ symbol.



## Petrol stop

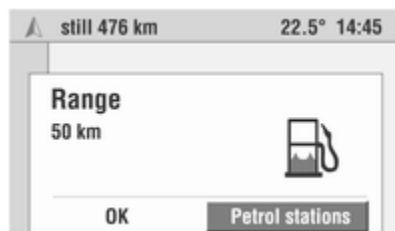


As soon as the range calculated by the trip computer has dropped below a certain distance, the Infotainment system informs you with a message and offers you the option of planning a route to a petrol station nearby.

Select **Petrol stations**.

A list of up to 10 petrol stations in the vicinity is displayed, sorted based on distance from the current location.

The arrow indicates the direction of the selected petrol station.

Only petrol stations included on the navigation DVD/CD as points of interest are displayed.

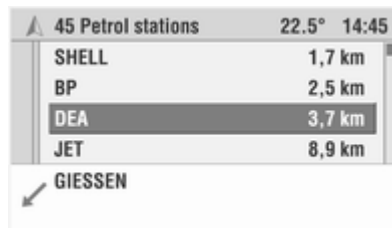

Select the desired petrol station from the list.


Select **Start navi**.

The Infotainment system calculates a route to the selected petrol station.

Or:

Confirm the range message with **OK** if you do not require route planning to a petrol station.

## Guidance

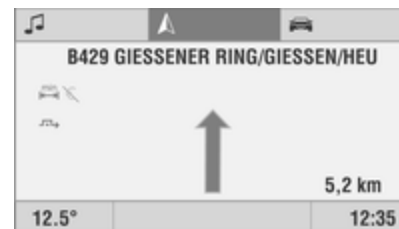


After the route has been calculated, guidance takes place by means of voice output and directional arrows.

The directional arrows are displayed in the guidance screen or in the main display in simplified form.

Voice output and the directional arrow in the display recommend the next change in travel direction.

- Adjusting the announcement volume in the navigation **Settings** menu ⇨ 38.
- Setting the route options in the navigation **Settings** menu ⇨ 38.

## Guidance screen

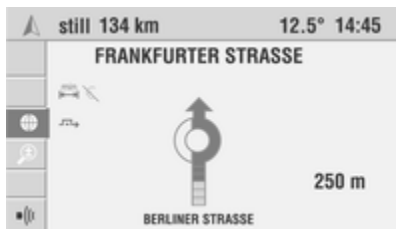

The guidance screen with the guidance arrows appears as soon as you have started the navigation.

For vehicles with Colour Info Display the navigation map or a combination of map and arrow display may be shown depending on the selected type of display.

The top display line shows the distance remaining to the destination.

## Dynamic menu



On the left-hand side of the guidance screen a small menu bar with symbols is displayed. The menu with the complete menu texts expands when you turn the multifunction knob.

If the menu bar is collapsed, the menu item shown as a symbol in the menu bar and highlighted by the cursor can be executed directly.

The following menu items are available in the guidance screen:

### With Colour Info Display:

- **Stop navi:** Stops guidance.
- **Menu:** Opens the submenu with the **Info**, **Destin. Input**, **Destination mem.**, **Journey** and **View** menu items.

Submenu **View** ⇨ 63

- **Destination mem.:** Opens the destination memory.
- **Journey:** Opens the **Journey** menu.
- **Map** 🌐, **Map/Arrow** ↗, **Arrow** ↑: Toggles between the three possible display types.
- **Scale** 📏: Changes the scale for map display.
- **Detour:** Opens the menu for planning an alternative route.
- **Repeat** ↺: Repeats the current navigation prompt.

### With Graphic Info Display:

- **Stop navi:** Stops guidance.
- **Destin. Input:** Opens the **Destin. Input** menu.
- **Destination mem.** Opens the destination memory.
- **Tours:** Opens the **Tours** menu.
- **Repeat** ↺: Repeats the current navigation announcement.

### Notes on Detour:

- A detour can be planned at any time while guidance is active.
- Planning detours ↷ 61.
- When dynamic guidance is active, information to this effect will appear automatically as soon as you approach a traffic hold-up on your route.
- Dynamic guidance ↷ 61.

### Notes on Repeat

- If the Infotainment system receives corresponding traffic information via RDS TMC an obstruction on your road will be announced as well.
- The current announcement can be repeated at any time using the **⏮** button.

### Pop-up info

With active route guidance, you can access any menu (e. g. **Audio**, **Settings**, etc.) conveniently without missing the next turn-off prompt.

If pop-up info is active, the Infotainment system briefly switches to the navigation screen before each turn-off prompt.

With the Colour Info Display the system switches to the combined map/arrow display. 100 m is always used as the map scale, irrespective of other settings.

After the turn-off prompt, the system switches back again to the original menu.

The pop-up info can be deactivated in the navigation **Settings** menu, ↷ 38.

### Set display type

(Colour Info Display only)

Depending on the display type previously set:

In the guidance screen, move the cursor to the **Map**, **Map/Arrow**, **Arrow** menu item.

When the menu is collapsed, the **🌐**, **📍** or **📍** symbols are displayed instead of the menu texts.

Press the multifunction knob repeatedly until the required display is shown in the guidance screen.

### Guidance with arrow display



The Infotainment system displays the following information in the guidance screen:

- Road turn-off: Next road to be taken.
- Navigation parameters: Route option, dynamic guidance, prompt off, etc.
- Turn-off or directional arrow.
- Current distance to the next turn-off point.

The closer you come to the turn-off point, the more segments of the directional arrow are filled.

If the car is not on a public road (e.g. company site or forest path) or on a road not yet stored on the navigation DVD/CD, an arrow pointing in the direction of the destination is displayed. When a road is reached that is stored on the navigation DVD/CD route guidance is performed.

After switching off the Infotainment system (e.g. when interrupting a journey) the current destination remains saved. When the Infotainment system is switched on again, a prompt asking if guidance is to be continued appears after a short time.

### Detailed arrows

(Colour Info Display only)



If the "detailed arrows" function is active, an additional and simplified early warning is displayed above the directional arrow that informs you about the next change in driving direction well in advance.

A bar with the distance to the turn-off point appears on the right-hand side of the screen.



When approaching the next junction or turn, a detailed view of the junction is displayed.


Activating detailed arrows in the navigation **Settings** menu, ↗ 38.

### Map display

(Colour Info Display only)




Next to the arrow displayed for guidance a map display with the route drawn in can be selected.

Select the **Map** menu item or the  symbol in the guidance screen.

A map with the current position is displayed. The calculated route is emphasised in colour on this map. The current position of the vehicle is shown by an arrow.

**Change map scale**  
(Colour Info Display only)



Select the **Scale**  menu item or the symbol in the guidance screen.


The currently set display scale is shown.

Change the scale by turning the multifunction knob, then confirm the value set.

The map will be redrawn to the selected display scale.

The map scale can be set between 50 m and 1000 km.



**Change map orientation**  
(Colour Info Display only)

You can change the orientation of the map display in the navigation **Settings** menu  38.


**Display POIs**  
(Colour Info Display only)



You have the option of displaying points of interest (e.g. petrol stations, hotels, etc.) on the map.

- Points of interest are displayed for scales of 1 km and smaller.
- Activating the display of POIs  38.  
POIs symbol overview  66.

**Combined map/arrow display**  
(Colour Info Display only)

The “split screen”, as it is known, shows a combination of map and arrow display in the guidance screen. Select the **Map/Arrow** menu item or the  symbol in the guidance screen.

**Dynamic guidance**



With dynamic guidance, the whole of the current traffic situation that is received by the Infotainment system via RDS TMC is incorporated into the calculation of the route.

If there is a traffic hold-up (e.g. traffic jam, road closure) on the planned route, you will be informed of this by the Infotainment system and you can decide whether the system should avoid the problem by changing the route in order to avoid the segment concerned or whether it would be more sensible just to drive through the problematic road section.

This enables the system to check continuously during guidance on the basis of the traffic information whether there is a better route for route guidance and a new route is sometimes calculated, for example, if a traffic jam has disappeared.

- Dynamic guidance can be activated/deactivated in the navigation **Settings** menu ↗ 38.
- The basis for the possible delay due to a traffic hold-up and calculated by the Infotainment

system is data that the system receives via the currently selected RDS TMC station. From experience, the actual delay may deviate from the calculation.

- The dynamic guidance only works if the Infotainment system receives traffic information via RDS TMC. TMC reception is indicated by the **TMC** symbol in the main display of the Audio function.

Depending on the traffic situation, there are two different types of detour:

### 1. Extensive detour

As soon as the Infotainment system has received information about one or more traffic hold-ups via RDS TMC that would mean a relatively long delay for navigation to your destination, the system offers you well in advance of the hold-up the option of taking a detour around the traffic hold-ups.

If a relatively long delay on your route is expected due to traffic hold-ups, a message informing you of the calculated delay is given.

- Select **Recalculate** if you want to make an extensive detour around the traffic hold-ups.
- Select **Cancel** if you do not want to make a detour.

Even after cancelling, it is possible to have the route recalculated via the **Detour** menu item.

Traffic hold-ups that are expected to result in just a short delay are detoured locally if desired via the **Detour** function (see below).


In the immediate vicinity of a traffic hold-up, a warning is issued again and a detour of the immediate traffic holdup (local detour) is offered via the **Detour** menu item.

### 2. Local Detour




With a local detour, all traffic hold-ups can be bypassed, even if they are not viewed as critical by the evaluation of the Infotainment system.

When you approach the last exit before a traffic hold-up, the Infotainment system will inform you to this effect.

In addition to the **Detour** menu text the  symbol appears on the route guidance screen.

You can now decide whether to calculate a detour or not.

### Planning a detour manually

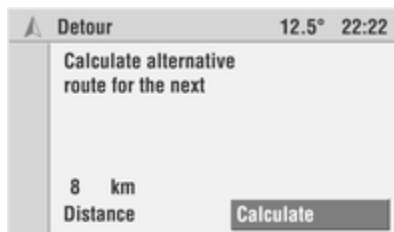

The Infotainment system offers the option of bypassing a specific part of the calculated route (starting at the


current vehicle position), in addition to the dynamic route guidance functions.

1. Select the **Detour** menu item in the guidance screen.  
The **Detour** menu is displayed.
2. Set the distance for the detour to a value between 1 and 50 km.
3. Select **Calculate**.  
An alternative route is calculated for the specified distance (starting at the current vehicle position).
4. Select **Return** to quit the **Detour** menu.

## Maps

### Displaying the map

(Colour Info Display only)

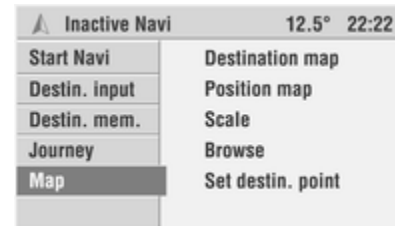

The Infotainment system provides the option of displaying a map at any time, even if navigation is inactive.

A navigation DVD/CD must be loaded.

#### If navigation is inactive:

Select the **Map** menu item in the navigation main menu.

The position map showing the current vehicle position is displayed.

#### If navigation is active:

Select the **Menu** menu item in the guidance screen.

Select the **View** menu item.


The position map showing the current vehicle position and a cursor are displayed.



In addition to the **Position map** menu item, the following functions are available in the menu bar.

- **Destination map:** If a destination has been entered, the map with the area surrounding the current destination is displayed.
- **Map scroll/Map scroll OFF:** Turns the cursor on and off and allows the cursor to be moved using the rocker switch. See below “Moving the map section”.
- **Scale:** Changes the scale for the map display.  
Changing map scale ⇨ 57.
- **Set destin. point:** Sets the cross of the cursor as the new destination.

### Moving the map section (Colour Info Display only)

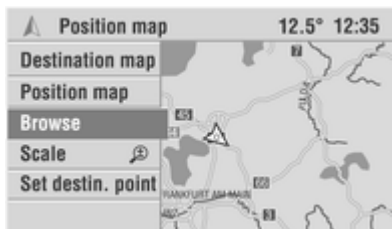

If the position map or the destination map is displayed, the cursor shown can be moved using the rocker switch.

If no cursor is displayed (e.g. when navigation is inactive):

1. Select the **Map scroll** menu item in the menu bar to show the cursor.
2. Move the cursor lines to the desired position on the map using the rocker switch

The map section is automatically shifted when you reach the screen edge with one of the cursor lines.

3. Select the **Map scroll OFF** menu item in the menu bar to restore the original map section (current position or destination) and hide the cursor.

### Entering destinations via the map (Colour Info Display only)




While the position or destination map is displayed:

1. Activate the cursor with the **Map scroll** menu item if it is not already shown.
2. Move the cursor to the desired point on the map.  
Initially use a large map scale (e.g. 20, 50, 100 km) to roughly set the map section.



3. Select a small scale to show a detailed map of all roads and to be able to exactly define the destination.

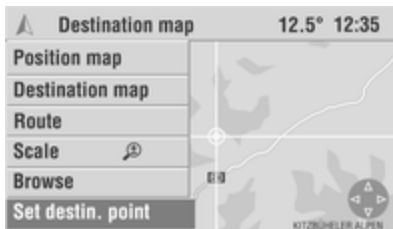

4. Select the **Set destin. point** menu item in the menu bar to accept the selected position on the map as the destination.

The **Destin. Input** menu with the details of the new destination is displayed.

5. Select **Save** to save the destination in the address book.

or:

select **Start navi** to activate guidance to the new destination.

If you have activated the display of points of interest (e.g. petrol stations) in the navigation **Settings** menu,













these are indicated on the map by corresponding symbols. Navigation settings ↗ 38

### Destinations beyond digitised roads ( Colour Info Display only)

When entering destinations via the navigation map you can also save destinations that are beyond a digitised road. The Infotainment system will then guide you as far as possible via digitised roads.

After that you are guided to the destinations via a directional arrow.

## Symbols overview

 1	 9	 17	 25	 33	 41
 2	 10	 18	 26	 34	 42
 3	 11	 19	 27	 35	 43
 4	 12	 20	 28	 36	 44
 5	 13	 21	 29	 37	 45
 6	 14	 22	 30	 38	 46
 7	 15	 23	 31	 39	 47
 8	 16	 24	 32	 40	

---

**No. Explanation**

---

- 1 Airport
- 2 Amusement park
- 3 ATM
- 4 Automobile club
- 5 Bank
- 6 Bus station
- 7 Car park
- 8 Car rental company
- 9 Car repair
- 10 Chemist
- 11 Cinema
- 12 City centre
- 13 Clinic
- 14 Community centre
- 15 Council office
- 16 Court house
- 17 Cultural centre

---

**No. Explanation**

---

- 18 Destination
- 19 Education
- 20 Embassy
- 21 Entertainment
- 22 Exhibition centre
- 23 Ferry
- 24 Fire station
- 25 Golf course
- 26 Hospital
- 27 Hotel
- 28 Industrial estate
- 29 Library
- 30 Marina
- 31 Military base
- 32 Monument
- 33 Museum
- 34 Park

---

**No. Explanation**

---

- 35 Park + Ride
- 36 Petrol station
- 37 Place of worship
- 38 Police
- 39 Post office
- 40 Railway station
- 41 Restaurant
- 42 Services
- 43 Shopping centre
- 44 Sports centre
- 45 Theatre
- 46 Tourist attraction
- 47 Tourist information

## TMC symbols overview



1



9



17



2



10



18



3



11



19



4



12



20



5



13



21



6



14



7



15



8



16

**For scales greater than 10 km:****No. Explanation**

---

- 1 Road obstruction
- 2 Road obstruction in both directions of travel

**For scales of 10 km and less:****No. Explanation**

---

- 3 Roadworks
- 4 Danger
- 5 Slippery road
- 6 Poor weather conditions
- 7 Bad roadway
- 8 Accidents
- 9 Slow or queuing traffic
- 10 Stationary traffic
- 11 Delays, waiting times
- 12 Exceptional vehicles
- 13 Narrow road sections

**No. Explanation**

---

- 14 No parking possibility
- 15 Vehicle on wrong carriageway
- 16 Closed roads
- 17 Bad visibility
- 18 Heavy wind
- 19 Smog alert
- 20 Overhead clearance restrictions
- 21 Observe information in the radio

# Index

## A

Activating CD player.....	31
Activating guidance.....	44
Activating the navigation system..	38
Address book.....	44
Add tour.....	44, 57
AM.....	22
Arrow display.....	57
AS.....	26
AS level.....	22
Automatic search.....	24
Automatic switch off.....	11
Autostore.....	26
Autostore lists.....	26
Aux input.....	11
AUX input.....	34

## B

Balance.....	19
Bass.....	19

## C

CD changer.....	31
CD, eject.....	31
CD Extras.....	31
CD, insert.....	31
CD text.....	31
Change map orientation.....	57
Change map scale.....	57

## D

Delete lists.....	38
Deleting characters.....	44
Destination input .....	44
Destination mem.....	44
Destin. input.....	44
Detour.....	61
Displaying the map.....	63
Display POIs.....	57
Driving time / Arrival time.....	38
Dynamic guidance.....	61
Dynamic menu.....	57

## E

Ejecting navigation DVD/CD.....	38
Entering destinations.....	44
Entering destinations via the map	63
Entering letters.....	44

## F

Fader.....	19
FM.....	22

## G

General information.....	4, 30, 36
Guidance .....	57
Guidance screen.....	57

## H

Home address.....	44
-------------------	----

<b>I</b>			
Ignition logic.....	11		
Info menu.....	11		
Infotainment system			
control elements.....	7		
instrument panel.....	7		
Multifunction unit.....	7		
steering wheel audio controls.....	7		
Inserting navigation DVD/CD.....	38		
<b>M</b>			
Main display.....	11		
Manual tuning.....	24		
Map display.....	57		
Map options.....	38		
Maps .....	63		
Map scroll.....	63		
Menu operation.....	11		
Multifunction knob.....	11		
Mute.....	11		
<b>N</b>			
Navi announcement.....	38		
Navigation, general information....	36		
Navigation settings.....	38		
<b>O</b>			
Operation .....	11		
Overview .....	7		
<b>P</b>			
Petrol stop.....	44, 57		
Planning detours.....	61		
Points of interest.....	44		
POIs.....	44		
Position.....	57		
Position map.....	63		
PTY selection.....	22		
<b>R</b>			
Radio data system (RDS) .....	26		
Radio Extras.....	22		
Random.....	31		
Random album.....	31		
Recalculate.....	61		
Repeat track.....	31		
Route guidance.....	44, 57		
Route list.....	57		
Route option.....	38		
<b>S</b>			
Scale.....	57		
Scan CD.....	31		
SDVC.....	20		
Setting the language.....	38		
Setting the navigation volume.....	38		
Setting the volume.....	11		
Show title.....	31		
Sound settings.....	19		
Speed dependent volume			
control (SDVC).....	20		
Starting CD replay.....	31		
Start navi.....	44		
Start-up volume.....	20		
Station list.....	24		
Station memory.....	24		
Station search.....	24		
Store.....	24		
Switching the Infotainment			
system on or off.....	11		
Symbols overview .....	66		
<b>T</b>			
TA volume.....	20		
Theft-deterrent feature .....	5		
TMC info.....	57		
Tone settings.....	19		
Tours.....	44, 57		
Travel guide information.....	44, 57		
Treble.....	19		
<b>U</b>			
Update stations.....	24		
Usage.....	22, 31, 34, 38		
User.....	19		
Using the CD player.....	31		
Using the Infotainment system....	11		
Using the navigation system.....	38		

**V**

View.....	63
Volume.....	11
Volume settings.....	20

---



---

# CD 30 / CD 30 MP3

Introduction .....	74
Radio .....	84
CD Player .....	90
AUX input .....	94
Index .....	96

## Introduction

General information .....	74
Theft-deterrent feature .....	75
Overview .....	77
Operation .....	78
Tone settings .....	81
Volume settings .....	82

### General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

The radio has six automatic and six manual station memories for each available waveband (FM, AM).

The digital sound processor provides you with several preset equalizer modes for sound optimisation.

The integrated CD player will entertain you with audio CDs and MP3 CDs.

The on-board computer can be accessed from the Infotainment system. For details please consult the Owner's manual for your car.

Furthermore, you can connect an external source, such as a mobile phone to the Infotainment system.

An audio source connected to the AUX input of your vehicle, e.g. a portable CD player or an MP3 player can be played back via the loudspeakers in the Infotainment system.

Optionally, the Infotainment system can be operated using controls on the steering wheel.

The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

### Important information on operation and traffic safety

#### Warning

The Infotainment system has to be used so that the vehicle can be driven safely at all times. If in doubt stop your vehicle and operate the Infotainment system while the vehicle is stationary.

## Radio reception


Radio reception may be disrupted by static, noise, distortion or loss of reception due to

- changes in distance from the transmitter,
- multi-path reception due to reflection,
- shadowing.

## Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrent.

The Infotainment system therefore functions only in your vehicle and is worthless for a thief.

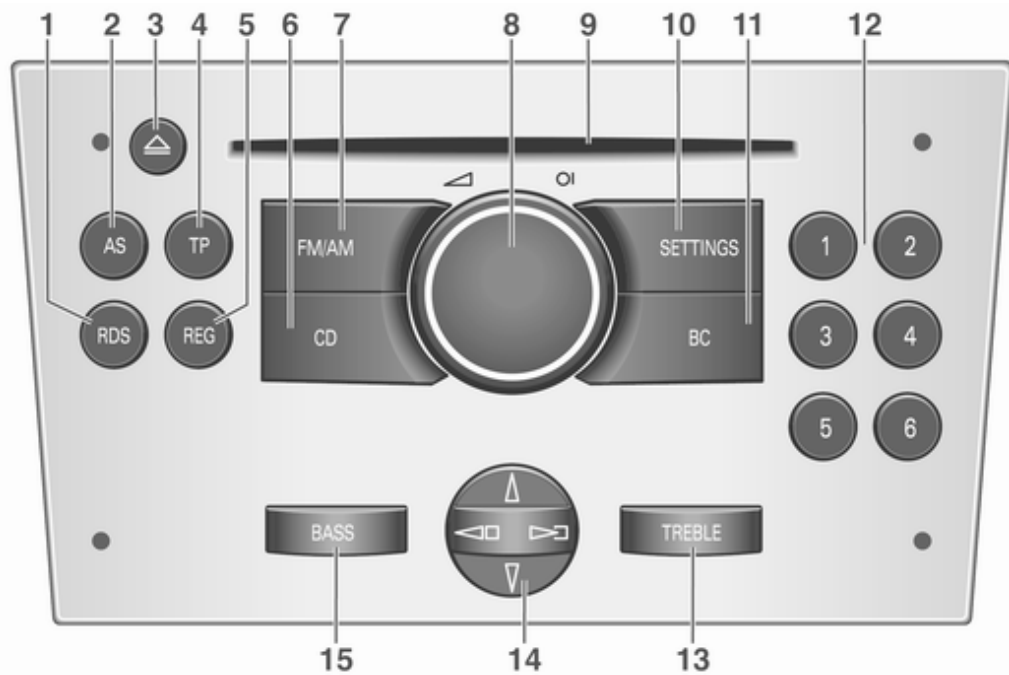


## Overview

### Control elements on instrument panel

<b>1</b>	RDS ..... 86	<b>7</b>	FM/AM ..... 84	<b>14</b>	Rocker switch ..... 91
	Display programme name or transmission frequency of the station ..... 86		Radio mode/switch between FM and AM ..... 84		Radio: ◀▶ automatic station search, Δ∇ manual station search ..... 84
	Update station list ..... 84		AUX input: Switch audio source to the external input ..... 84		CD: ◀▶ track selection/ fast forward/fast rewind, Δ∇ Album/CD selection, ∇ Repeat track, Δ Scan CD ..... 91
<b>2</b>	AS ..... 86	<b>8</b>	▶OI knob ..... 78	<b>15</b>	BASS ..... 81
	Activate/deactivate AS level ..... 86		Press briefly: Switch on/off Infotainment system ..... 78		Bass adjustment ..... 81
	Automatic station store ..... 86		Press and hold: activate/ deactivate mute ..... 78		
<b>3</b>	▲ ..... 91		Turn: Adjust volume ..... 78		
	Eject CD ..... 91	<b>9</b>	Audio/MP3 CD slot ..... 91		
<b>4</b>	TP ..... 86	<b>10</b>	SETTINGS ..... 82		
	Traffic programme ..... 86		Sound settings ..... 81		
<b>5</b>	REG ..... 86		Volume settings ..... 82		
	Regional programme on/ off ..... 86		System settings ..... 78		
<b>6</b>	CD ..... 91	<b>11</b>	BC ..... 76		
	CD mode ..... 91		Trip computer ..... 76		
		<b>12</b>	1...6 ..... 84		
			Station buttons ..... 84		
		<b>13</b>	TREBLE ..... 81		
			Treble adjustment ..... 81		

## Steering wheel audio controls

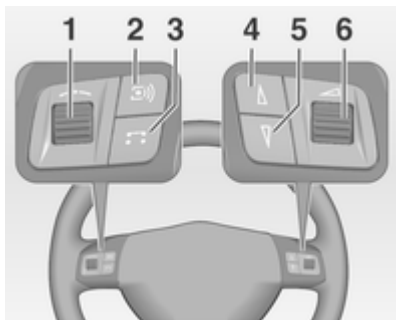

1	Thumbwheel .....	78
	Turn: TID (Triple-Info-Display): Manual station search .....	78
	Turn: GID (Graphic-Info-Display): Move cursor, manual station search (when combined with a trip computer, turning the thumbwheel has no radio function) .....	78
	Press: TID: no function .....	78
	Press: GID: call up/reset trip computer, select a trip computer entry .....	78

2	☐ button .....	84
	Radio: Next stored station ...	84
	CD: Start CD playback .....	91
	MP3: Next album .....	91
3	☐ button .....	91
	Switch between radio/CD/MP3 and AUX mode mode ...	91
4	▲ button .....	84
	Radio: search down, scroll back through station memory .....	84
	CD: Short press: Skip one track backwards .....	91
5	▼ button .....	84
	Radio: search up, scroll forwards through station memory .....	84
	CD: Short press: Skip one track forwards .....	91
6	▴ button .....	78
	Turn: adjust volume .....	78
	Hold: adjust volume continuously .....	78

## Operation

## Control elements

The Infotainment system is operated optionally via:

- the central control unit in the instrument panel ↷ 76
- controls on the steering wheel ↷ 76.

The operation of the Infotainment system can vary with the information display type. There are two different information displays available: Triple-Info-Display (TID) and Graphic-Info-Display (GID). See "Information displays" in the Owner's manual for further information.

## Switching the Infotainment system on or off

Press the OI knob.

The audio source last set is played.

### Switching on and off with the ignition key (automatic switch-on)

If the automatic switch-on is enabled, the Infotainment system can also be switched off and on again via the ignition.

This link between the radio and ignition is preset in the factory, but this can be disabled.

- If the automatic switch-on is disabled, the Infotainment system can only be switched on with the OI button or by inserting a CD and off with the OI button.
- The automatic start is always enabled after the Infotainment system has been disconnected from the operating voltage and re-connected.

### Enable/Disable Ignition Logic

1. Press **SETTINGS** button to display **Audio**.
2. Press the rocker switch  $\Delta \nabla$  to display **System**.

3. Press the rocker switch  $\triangleleft \triangleright$  until **Ign.Logic ON/OFF** is displayed.
4. Select the desired status with the rocker switch  $\Delta \nabla$ .

After a few seconds the main menu is displayed.

### Automatic switch-off

The Infotainment system switches itself off automatically after one hour if you switch it on with the ignition off.

### Setting the volume

Turn the  $\triangleleft$  knob.

- The Infotainment system plays at the volume last set, provided the volume was below the maximum switch-on volume  $\rightarrow 82$ .
- The volume of traffic announcements, external audio sources, speed-dependent volume and maximum switch-on volume can be adjusted separately  $\rightarrow 82$ .

- If the respective source is enabled, the volume of the traffic announcements, the external audio sources and the radio and CD can be adjusted separately.

### Mute

Press and hold the OI knob to mute the audio sources.

**Mute** is displayed.

To cancel mute again: turn the OI knob or press and hold the OI knob again.

Muting will be cancelled during a traffic announcement.

### Speed dependent volume control (SDVC)

When SDVC is activated  $\rightarrow 82$ , the volume is adapted automatically to make up for the road and wind noise when driving.

### External source

An external source, e.g. a mobile phone or a navigation system, can be connected to the Infotainment system.

The external source is automatically transferred through via a control signal from the device connected, even when the Infotainment system is off. In this case **External In** is displayed.

We recommend having appliances installed by a Vauxhall Authorised Repairer.

### AUX input

An external audio source, e.g. a portable CD player, can be connected via the AUX input of your vehicle. Stereo sound from this source is played back via the loudspeakers of the Infotainment system.

The connector is located in the area of the centre console.

Always ensure that the AUX input remains clean and dry.

For the best possible audio quality, the external audio source should be set to maximum volume. On units with line-out, the output signal is available at a fixed audio level and cannot be changed.

To avoid overriding the AUX input, the effective output voltage of the external audio source must be lower than 1.5 V.

### Main display

The main menu is the display that appears after the Infotainment system is switched on.

The display varies depending on the equipment level of the vehicle.

The following information can be displayed:

#### Trip computer information

Display of on-board computer information, which was selected with the **BC** button. See your car owner's manual.

#### Audio Information

Display of the following audio information:

- Current waveband or CD.
- Current station name or station frequency or CD track number or CD track name.

- If the Regional function is enabled, **REG** is displayed ⇨ 86.
- If the AS level is enabled, **AS** will be displayed ⇨ 86.
- If the RDS function is enabled, **RDS** is displayed ⇨ 86.
- If traffic announcements are enabled, **[TP]** or **[ ]** will be displayed ⇨ 86.
- If a CD is inserted, either **CD** or **CD in** will be displayed. If a CD with MP3 music files is being played, **MP3** is also displayed ⇨ 91.
- If Random CD is enabled either **RDM** is displayed ⇨ 91.





### Outside Temperature

Indication of the current outside temperature. See your car owner's manual.

### Time

Display of the current time. See your car owner's manual.

### Information on the climate control system

See car owner's manual.

## Tone settings

Press the **SETTINGS** button to make the following settings:

- **Fader**
- **Balance**
- **Sound**

Press the **BASS** button to enhance or reduce low frequencies.

Press the **TREBLE** button to enhance or reduce high frequencies.

### Setting the volume distribution between front - rear

1. Press the **SETTINGS** button to display **Audio**.
2. Use the rocker switch ◀ or ▶ to select **Fader**.
3. Adjust the value with the rocker switch ▽ or △.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

### Setting the volume distribution between right - left

1. Press the **SETTINGS** button to display **Audio**.
2. Use the rocker switch ◀ or ▶ to select **Balance**.
3. Adjust the value with the rocker switch ▽ or △.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

## Sound

1. Press the **SETTINGS** button to display **Audio**.
2. Use the rocker switch ◀ or ▶ to select **Sound**.
3. Select a tone colour such as **Rock** or **Jazz** with the rocker switch ▽ or △.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

## Setting Bass

Make sure that any sound optimisations are disabled.

The **Bass** settings apply to the current audio source and are stored separately for FM, AM and CD.

1. Press the **BASS** button to display **Bass**.
2. Adjust the value with the rocker switch  $\nabla$  or  $\Delta$ .  
After that, the audio source is displayed.
3. If you press the **BASS** button again after you've changed the settings, the audio source is immediately displayed.

## Setting Treble

Make sure that any sound optimisations are disabled.

The **Treble** settings apply to the current audio source and are stored separately for FM, AM and CD.

1. Press the **TREBLE** button to display **Treble**.
2. Adjust the value with the rocker switch  $\nabla$  or  $\Delta$ .  
After that, the audio source is displayed.
3. If you press the **TREBLE** button again after you've changed the settings, the audio source is immediately displayed.
4. Press the **SOUND** button until the last active display appears again.

## Volume settings

Press **SETTINGS** button.

The following menu items are available:

- **TA Volume:** Volume of traffic announcements
- **SDVC:** Speed Dependent Volume Control

- **On Volume:** Maximum volume when the Infotainment system is switched on
- **Ext. In Vol.:** Volume of an external source (for example when connecting a mobile telephone)

## TA Volume

If the TP function is switched on, the system increases the volume for traffic announcements by default. This function allows setting a minimum volume for traffic announcements.

1. Press the **SETTINGS** button to display **Audio**.
2. Use the rocker switch  $\triangleleft$  or  $\triangleright$  to select **TA Volume**.
3. Adjust the value with the rocker switch  $\nabla$  or  $\Delta$ .  
TID: After a few seconds **Audio** is displayed.  
GID: After a few seconds **Settings** is displayed.
4. Press the **SETTINGS** button to display the last active audio source.

The volume is only set to a minimum for announcements if the current volume setting is lower than the minimum announcement volume selected.

## SDVC

To compensate for ambient and rolling noise, the Infotainment system's volume is adjusted to the speed of the vehicle. You can use the SDVC function to adjust the speed-dependent volume.

1. Press the **SETTINGS** button.
2. Use the rocker switch ◀ or ▶ to select **SDVC**.
3. Adjust the value with the rocker switch ▾ or ▴.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

## Ext. In Vol.

Use this function to set a minimum volume of external audio sources such as a mobile phone.

1. Press the **SETTINGS** button.
2. Use the rocker switch ◀ or ▶ to select **Ext. In Vol.**
3. Adjust the value with the rocker switch ▾ or ▴.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

## On Volume

1. Press the **SETTINGS** button.
2. Use the rocker switch ◀ or ▶ to select **On Volume**.
3. Adjust the value with the rocker switch ▾ or ▴.

TID: After a few seconds **Audio** is displayed.

GID: After a few seconds **Settings** is displayed.

4. Press the **SETTINGS** button to display the last active audio source.

The maximum switch on volume selected is used only if the volume prior to switching off was higher than the maximum switch on volume and the Infotainment system has been off for at least five minutes with the ignition off.

## Radio

Usage .....	84
Station search .....	84
Autostore lists .....	86
Radio data system (RDS) .....	86

## Usage

### Radio mode

Switch from CD or AUX mode to radio mode as shown below:

Press **FM/AM** button.

You are listening to the station last tuned in.

### Selecting a waveband

The Infotainment system provides two wavebands: FM and AM. In addition, each of the wavebands has an autostore memory location (AS) where stations can be automatically stored ↗ 86.

The radio is on.

Press **FM/AM** button briefly.

The radio switches between FM, FM-AS, AM and AM-AS.


The station last selected on the waveband is heard and displayed.

## Station search

### Automatic search

RDS and TP need to be deactivated ↗ 86.

Keep the rocker switch ◀ or ▶ pressed until **Seek** is displayed.

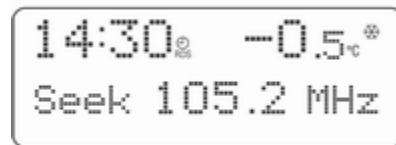

The radio is muted until a station is found.

If the radio cannot find a station, it switches automatically to a more sensitive search level. If it still cannot find a station, the last frequency active will be set.

## Manual station search

The manual station search is used to tune in to stations of known frequencies.

Keep the rocker switch  $\nabla$  or  $\Delta$  pressed until the desired frequency of the station is reached.

**MAN** is displayed.



- **Coarse tuning:**  
Hold the rocker switch  $\nabla$  or  $\Delta$  down until the desired frequency is almost reached.
- **Fine tuning:**  
Tap the rocker switch  $\nabla$  or  $\Delta$  until the exact frequency is reached.

## Station memory

Separate memory slots are available for each wavelength (FM, AM):

6 memory slots are available for each of the following wavelength:

FM, FM-AS (automatically stored FM stations), AM, AM-AS (automatically stored AM stations).

The memory slots can be selected directly in the respective wavelength via the station buttons.

## Manual storing

Tune in to the desired station.

Keep the station button pressed on which the tuned-in station is to be stored.

The radio is muted for a short while and displays the station previously stored in the memory slot.

After the confirmation signal, the tuned-in station is played again and indicated on the display.

The station is stored in the desired memory slot.

**RDS on** or **RDS off**  $\leftrightarrow$  86 are stored together with the station.

## Station list

The Infotainment system stores all receivable FM stations in the background.

The list of receivable stations is updated automatically if the radio searches for a TP station or an automatic storage run is performed using the Autostore (AS) function.

RDS stations  $\leftrightarrow$  86 are sorted by radio company in the station list (HR1, HR2...)

## Update list of stations

Press the **RDS** button until you hear the confirmation signal.

The display shows: **Memory FM** followed by **MEM** and the continuous frequency.

## Autostore lists

### Activate/deactivate AS level

Tap the **AS** button.

When the AS level is active, the display shows **AS**.

### Autostore (AS)

Automatic storing (AS) of any receivable station is possible in all wavebands. These stations are stored in a separate AS memory.

To automatically store stations, proceed as follows:

1. Select the required waveband.
2. Enable/disable on standby for traffic announcements if desired  
⇨ 86.
3. Hold down the **AS** button until you hear the confirmation signal.

The radio changes over to the AS level of the selected waveband (FM-AS or AM-AS).

The automatic station storing is started.

The 6 best receivable stations in the selected waveband are stored to memory slots 1 to 6.

After the stations have been stored, the desired station can be selected by pressing the appropriate station button.

RDS is switched on automatically when automatic storing is enabled. First, all receivable RDS stations are stored.

If on standby for traffic announcement is switched on prior to or during automatic storing, the radio will select a memory slot with a traffic announcement station on completion of the automatic station search.

If on standby for traffic announcement is switched on during automatic storing, then the automatic station search will remain active until at least one traffic programme is found.

### Storing new stations with AS

If you drive out of the reception area of a stored station, new stations need to be stored.

### Calling up a station

The desired waveband and the desired mode need to be active  
⇨ 84.

Press the **AS** button briefly to go to the AS level.

Select the storage location with the storage buttons.

## Radio data system (RDS)

RDS is a service provided by the radio stations which makes it significantly easier to find the FM channels required and enables them to be received without interference.

RDS is only possible on the FM band.

### Switching RDS on/off

If RDS is switched on, the RDS functions are enabled and only RDS stations are sought during the automatic station search.

If you switch RDS off, the RDS functions will be disabled and the automatic station search will not only look for RDS stations.

Press the **RDS** button to activate RDS.


If the RDS function is switched on, **RDS** and the programme name of an RDS station is displayed.



If the station currently selected is not an RDS station, the radio searches automatically for the next receivable RDS station.

To deactivate RDS, press the **RDS** button again.

If the RDS function is not switched on, the frequency of an RDS station is displayed, **RDS** is not displayed.

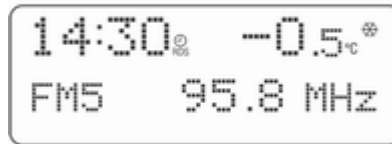

#### RDS station selection

RDS must be switched on.

Tap the rocker switch ◀ or ▶.

The radio scrolls on to the next RDS station stored in the list of stations ↻ 84.

#### RDS station search

To search RDS stations, proceed as follows:

RDS must be switched on.


Keep the rocker switch ◀ or ▶ pressed until **Seek** is displayed.

The radio is muted until a station is found.

If you switch the traffic programme (TP) on before searching for stations, the system will only search for traffic programme stations.

#### Programme type (PTY)

Many RDS stations transmit a PTY code describing the type of programme broadcast (e. g. news). The PTY code allows selection of stations by programme type.

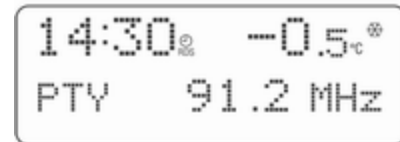

### Programme type selection

1. Press the **SETTINGS** button to display **Audio**.
2. Press the rocker switch ◀ or ▶ until **PTY** is displayed.
3. Press the rocker switch ∇ or ▲ to select one of the programme types e.g. **News** or **Entertainment**.
4. Press the rocker switch ◀ or ▶ until **PTY** is displayed.

The radio is muted and seeks a station of the desired programme type.

If the radio does not find an appropriate station, it plays the station to which the radio was most recently tuned.

### Regional programmes

Some RDS stations transmit different regional programmes over different frequencies at certain times.

### Switching on regionalisation

The RDS function must be switched on.

Press the **REG** button briefly.

**REG** is shown on the display.

During the search for the frequency with the best reception, the radio stays with the regional programme it is tuned to.

### Switching off regionalisation

Press the **REG** button briefly again.

**REG** is no longer shown on the display.

The radio allows switching to another regional programme.

### Traffic programme (TP)

Traffic programme stations are FM RDS stations which broadcast traffic news.

Traffic stations can be recognised by the **TP** symbol in the display.

### Switching traffic programme on/off

- If radio traffic announcement is enabled, **[TP]** or **[ ]** is displayed.
- If the current station is a traffic programme station, **[TP]** appears in the display.

- If the current station is a not traffic programme station, the radio will automatically search for the traffic station with the best reception.

**[ ]** does not appear on the display.

Press the **TP** button to switch on **TP**.

**[ ]** is displayed.

- The automatic station search feature searches only for traffic announcements.
- During automatic search or if reception of a traffic programme is not possible, **[ ]** is displayed.
- If on standby for traffic announcement is switched on, then CD playback is interrupted during a traffic announcement.
- Traffic announcements are played at the preset traffic announcement volume ⇄ 82.



Press the **TP** button again to switch **TP** off.

**[ ]** is no longer displayed.



### Traffic programme station search

This function is only possible within the FM waveband.

Keep the rocker switch  or  pressed.

The radio only searches for traffic programme stations.

### Hearing traffic announcements only

Being on standby for traffic announcements must be enabled.

Turn the knob  to the left to reduce the volume to zero.

Or:

Keep button  pressed for at least two seconds to activate muting.

**Mute** is displayed.

Traffic announcements are played at the preset volume for traffic announcement ⇨ 82.

### Deactivating traffic announcements

To switch off a traffic announcement, e. g. during CD playback, proceed as follows:

Press **TP** button.

The traffic announcement is stopped.

The most recent CD track plays.

On standby for traffic announcement remains switched on.

### Traffic announcement whilst an external source is active

The external source (e. g. mobile phone) has priority over traffic announcements. However, you may nevertheless listen to a traffic announcement. TP needs to be active.

During the conversation, the radio or CD player are muted. **Extern In** and **[TP]** are displayed.

During a traffic announcement, the name of the traffic programme is displayed instead of **Extern In**.

The conversation is not interrupted.

Press button **TP** to toggle between the traffic announcement and the external source.

## CD Player

General information .....	90
Usage .....	91

### General information

With the CD player you can play standard commercial CDs with a diameter of 12 cm.

#### Caution

Under no circumstances place DVDs, single-CDs with a diameter of 8 cm or shaped CDs in the audio player.

You must not put any stickers on CDs. These discs can get jammed in the CD drive and ruin the drive. An expensive replacement of the device will then be necessary.

- The format of the CD must be ISO 9660 Level 1, Level 2 or JOLIET. All other formats cannot be played back reliably.
- Audio CDs with copy protection, which are not in compliance with the audio CD standard, may not play correctly or not at all.
- You can also use the Infotainment system to play CDs containing MP3 music data.

- Self-recorded CD-Rs and CD-RWs are more vulnerable to mishandling than prerecorded CDs. Correct handling, especially in the case of self-recorded CD-Rs and CD-RWs, must be ensured. See below.
- Self-recorded CD-Rs and CD-RWs may not play correctly or not at all. In such cases it is not the equipment that is at fault.
- Avoid leaving fingerprints when you change CDs.
- Put CDs back in their sleeves immediately after removing them from the CD player in order to protect them from damage and dirt.
- Dirt and liquids on CDs can smear the lens of the CD player inside the device and cause faults.
- Protect CDs from heat and direct sunlight.
- The following restrictions apply for data stored on an MP3 CD:  
When naming albums and tracks, umlauts or special characters should not be included.

Applicable playlist extensions:  
"m3u" or "pls".

When generating (coding) the MP3 files from audio data, a bitrate of up to max. 256 kbit/s should be used.

To use MP3 files in the Infotainment system, the MP3 files must have the file extension ".mp3".

- To avoid excessively long access times, never create more than 20 albums on a MP3 CD. The albums can be selected individually with the Infotainment system.
- Each album may hold up to 127 single tracks and sub-directories which can be selected individually. The directory depth must not exceed 8 levels.
- To guaranteed undisturbed playback do not use mixed mode CDs containing audio tracks and MP3 files.

## Usage

### Inserting a CD

Insert the CD with the printed side up into the CD slot.

The CD is automatically drawn in.

Do not prevent or assist the CD being drawn in.

**Read CD** and the **CD** symbol appear on the display, then the number of CD tracks is displayed.



With MP3 CD, the **MP3** symbol lights up on the display and the first album name is displayed.

The first track starts to play.

Information about the track (title, artist) are displayed as soon as the first track starts to play. See below: "Changing the display type":

### CD playback

Switch from radio mode to CD mode as follows:

Press the **CD** button.

The CD track last played is displayed and starts to play.

### Track selection

To select a track while a CD is playing, tap on rocker switch ◀ or ▶ repeatedly until the desired track is displayed.

The track is played.

### Fast search forwards/backwards

To find a certain point on a CD, proceed as follows:

You're listening to a track.

Keep the rocker switch ◀ or ▶ pressed until you reach the point you want.

The CD plays at increased speed and reduced volume.

### Album selection for MP3 CDs

You are listening to a track from an album.

Tap on the rocker switch ▽ ▲ repeatedly until the desired album is displayed.

The first track on the album is displayed and played.

All albums which do not contain MP3 files are automatically skipped.

### Random mode

#### Random (Random)

When random play is selected, the tracks on a CD will be played in random order.

Press the **CD** until **Random** is displayed.

Tap on the rocker switch ◀ or ▶ to select a setting.

### Audio CD:

- **Random on:** activates random mode
- **Random off:** deactivates random mode

### MP3 CD:

- **Random album:** Random playback of the tracks of an album
- **Random CD:** Random playback of the tracks of several albums
- **Random off:** deactivates random mode

If the random function is enabled **RDM** appears on the display.

### Repeat track

Use the repeat function to repeat the current CD track.

You're listening to a track.

Press rocker switch ▽. In the case of an MP3 CD, keep the rocker switch pressed longer.

**Repeat** is displayed.

The track will be repeated until the function is cancelled.

To cancel the repeat function, press rocker switch ▽ or select a new CD title.

### Scan CD

You're listening to a track.

Press rocker switch ▲. In the case of an MP3 CD, keep the rocker switch pressed longer.

**Scan** is displayed.

The first ten seconds of each CD track are played back.

To cancel the scan function, press rocker switch ▲ or select a new CD title.

### Changing the display type

Different information can be displayed.

Briefly press the **CD** button to change the display.

Depending on the CD type (audio CD with or without CD text, MP3 CD with or without track name (ID3 tags)), the following may be displayed.

#### Audio CD without CD text:

Track number and playing time

**Audio CD with CD text:**

- Track name
- Artist name
- CD name
- Track number and playing time
- Track number

**MP3 CD without ID3 tags**

- File name
- Track number and playing time
- Track number
- Album name

**MP3 CD with ID3 tags**

- Track name
- Artist name
- Album name on which the track was published
- Track number and playing time
- Track number

**Traffic announcement in CD mode**

Traffic announcements can be received while a CD is playing. Traffic programme (TP) ↪ 86.

A traffic announcement can be terminated with the **TP** button and the current CD will continue to play.

**Removing a CD**

Press the  $\Delta$  button.

**Eject CD** appears on the display.

If a CD is ejected, the last radio station used will automatically be played.

A CD can be ejected even if the appliance is turned off. The appliance switches off after the CD has been removed.

If the CD is not removed, it will return to the player automatically after a short time.

## AUX input

Usage ..... 94

### Usage

To play back an audio source connected to the AUX input of the vehicle, e.g. a portable CD player, via the Infotainment system loudspeakers, the audio source has to be enabled:

When the radio is on.

Connect the audio source to the AUX input of the vehicle.

Press the **FM/AM** button until **AUX** appears on the display.



The external audio source is transferred through on the Infotainment system.

Enable the external audio source and set it to maximum volume.

The audio source signal is played back via the Infotainment system loudspeakers.



# Index

<b>A</b>		<b>I</b>	
Activating CD player.....	91	Ignition logic.....	78
AM.....	84	<b>M</b>	
AS.....	86	Main display.....	78
Automatic search.....	84	Manual tuning.....	84
Automatic switch off.....	78	Multifunction knob.....	78
Autostore level.....	86	Mute.....	78
Autostore lists.....	86	<b>O</b>	
AUX input.....	78, 94	On Volume.....	82
AUX volume.....	82	Operation .....	78
<b>B</b>		Overview .....	77
Balance.....	81	<b>P</b>	
Bass.....	81	Programme type.....	86
<b>C</b>		PTY.....	86
CD, eject.....	91	<b>R</b>	
CD, insert.....	91	Radio data system (RDS) .....	86
CD text.....	91	Random mode.....	91
<b>E</b>		Regional programmes.....	86
External In Volume.....	82	<b>S</b>	
<b>F</b>		SDVC.....	82
Fader.....	81	Setting the volume.....	78
FM.....	84	Sound settings.....	81
<b>G</b>		Speed dependent volume control (SDVC).....	82
General information.....	74, 90	Starting CD replay.....	91
		Station list.....	84



---

Station memory.....	84
Station search.....	84
Store.....	84
Switching the Infotainment system on or off.....	78
<b>T</b>	
TA volume.....	82
Theft-deterrent feature .....	75
Tone settings.....	81
TP.....	86
Traffic announcements.....	86
Traffic programme.....	86
Treble.....	81
<b>U</b>	
Update stations.....	84
Usage.....	84, 91, 94
Using the CD player.....	91
Using the Infotainment system.....	78
<b>V</b>	
Volume.....	78
Volume settings.....	82



---

## R 10 / CC 20

Introduction .....	100
Radio .....	110
Audio players .....	116
Index .....	118

## Introduction

General information .....	100
Theft-deterrent feature .....	100
Overview .....	103
Operation .....	105
Tone settings .....	107
Volume settings .....	108

## General information

The Infotainment system provides you with state-of-the-art in-car infotainment.

The radio has six automatic and six manual station memories for each available waveband (FM, AM).

The digital sound processor provides you with five preset equalizer modes for sound optimisation.

The integrated cassette player (CC 20 only) with autostop function will entertain you with audio cassettes.

Furthermore, you can connect an external source, such as a mobile phone to the Infotainment system.

An audio source connected to the AUX input of your vehicle, e.g. a portable CD player or an MP3 player can be played back via the loudspeakers in the Infotainment system.

The well-thought-out design of the control elements and the clear displays enable you to control the system easily and intuitively.

## Important information on operation and traffic safety

### Warning

The Infotainment system has to be used so that the vehicle can be driven safely at all times. If in doubt stop your vehicle and operate the Infotainment system while the vehicle is stationary.

## Radio reception

Radio reception may be disrupted by static, noise, distortion or loss of reception due to


- changes in distance from the transmitter,
- multi-path reception due to reflection,
- shadowing.

## Theft-deterrent feature

The Infotainment system is equipped with an electronic security system for the purpose of theft deterrent.



---

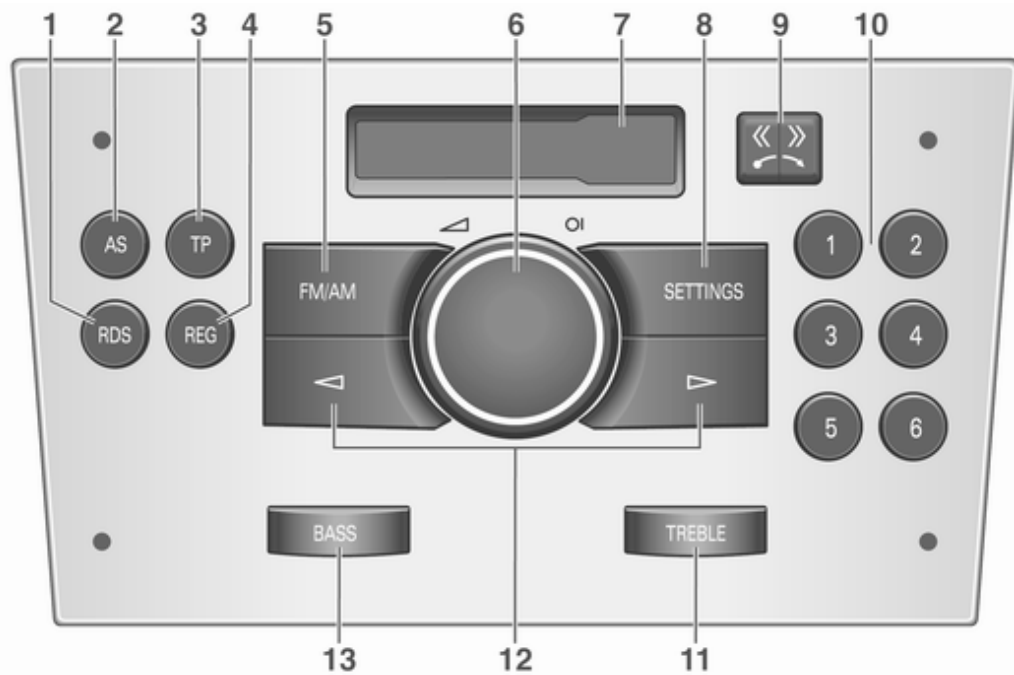
The Infotainment system therefore functions only in your vehicle and is worthless for a thief.



## Overview

### Control elements on instrument panel CC 20

- |  |   |
|--|---|
| <p><b>1</b> RDS ..... 112<br/>           Display programme name<br/>           or transmission frequency<br/>           of the station ..... 112</p> <p><b>2</b> AS ..... 112<br/>           Automatic station store ..... 112</p> <p><b>3</b> TP ..... 112<br/>           Traffic programme ..... 112</p> <p><b>4</b> REG ..... 112<br/>           Regional programme on/<br/>           off ..... 112</p> <p><b>5</b> FM/AM ..... 110<br/>           Radio mode/switch<br/>           between FM and AM ..... 110</p> <p><b>6</b>  OI knob ..... 105<br/>           Press: Switch on/off<br/>           Infotainment system ..... 105<br/>           Turn: Adjust volume ..... 105</p> <p><b>7</b> Cassette slot ..... 116</p> <p><b>8</b> SETTINGS ..... 108<br/>           Volume settings ..... 108<br/>           System settings ..... 105</p> | <p><b>9</b> Cassette rewind and fast<br/>           forward ..... 116<br/>           Switch between radio and<br/>           cassette ..... 116<br/>           Eject cassette ..... 116</p> <p><b>10</b> 1...6 ..... 110<br/>           Station buttons ..... 110</p> <p><b>11</b> TREBLE ..... 107<br/>           Treble adjustment ..... 107</p> <p><b>12</b>  ..... 110<br/>           Settings for radio ..... 110<br/>           Settings for cassette<br/>           player ..... 116</p> <p><b>13</b> BASS ..... 107<br/>           Bass adjustment ..... 107</p> |
|--|---|

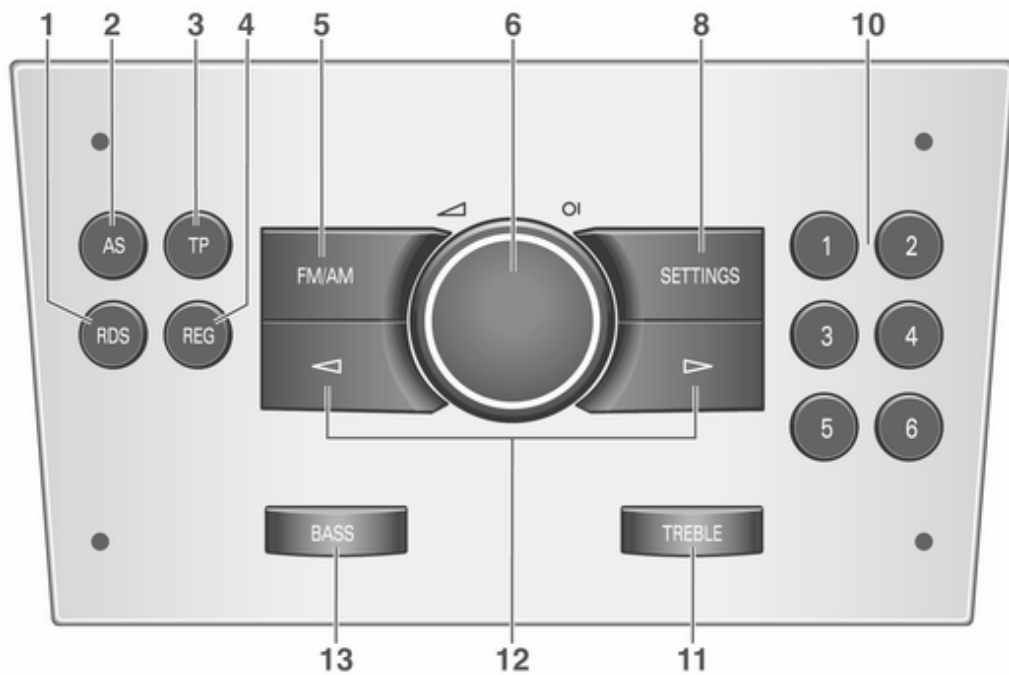



## Control elements on instrument panel R 10

<b>1</b>	RDS .....	112	<b>11</b>	TREBLE .....	107
	Display programme name or transmission frequency of the station .....	112		Treble adjustment .....	107
<b>2</b>	AS .....	112	<b>12</b>	◀▶ .....	110
	Automatic station store .....	112		Settings for radio .....	110
<b>3</b>	TP .....	112		Settings for cassette player .....	116
	Traffic programme .....	112	<b>13</b>	BASS .....	107
<b>4</b>	REG .....	112		Bass adjustment .....	107
	Regional programme on/ off .....	112			
<b>5</b>	FM/AM .....	110			
	Radio mode/switch between FM and AM .....	110			
<b>6</b>	◁ OI knob .....	105			
	Press: Switch on/off Infotainment system .....	105			
	Turn: Adjust volume .....	105			
<b>8</b>	SETTINGS .....	108			
	Volume settings .....	108			
	System settings .....	105			
<b>10</b>	1...6 .....	110			
	Station buttons .....	110			

## Operation

### Control elements

The Infotainment system is operated via the central control unit in the instrument panel ↗ 102.

### Switching the Infotainment system on or off

Press the OI knob.

The audio source last set is played.

### Switching on and off with the ignition key (automatic switch-on)

If the automatic switch-on is enabled, the Infotainment system can also be switched off and on again via the ignition.

This link between the radio and ignition is preset in the factory, but this can be disabled.

- If the automatic switch-on is disabled, the Infotainment system can only be switched on and off with the OI button.

- The automatic start is always enabled after the Infotainment system has been disconnected from the operating voltage and re-connected.

### Enable/Disable Ignition Logic

1. Press **SETTINGS** button until **Ign.Logic ON/OFF** is displayed.
2. Select the desired status with button **◀** or **▶**.
3. After a few seconds the main display appears.

### Automatic switch-off

The Infotainment system switches itself off automatically after one hour if you switch it on with the ignition off.

### Setting the volume

Turn the  knob.

- The Infotainment system plays at the volume last set, provided the volume was below the maximum switch-on volume ⇨ 108.

- Traffic announcements and external audio sources are inserted at a preset minimum volume ⇨ 108.
- The volume of the traffic announcements, the external audio sources, speed dependent volume and maximum switch-on volume can be adjusted separately.

### Mute

Press and hold the OI knob to mute the audio sources.

**Mute** is displayed.

To cancel mute again: turn the OI knob or press and hold the OI knob again.

Muting will be cancelled during a traffic announcement.

### Speed dependent volume control (SDVC)

When SDVC is activated ⇨ 108, the volume is adapted automatically to make up for the road and wind noise when driving.

### External source

An external source, e.g. a mobile phone or a navigation system, can be connected to the Infotainment system.

The external source is automatically transferred through via a control signal from the device connected, even when the Infotainment system is off. In this case **External In** is displayed.

We recommend having appliances installed by a Vauxhall Authorised Repairer.

An external source can only be connected to the CC 20.

### Main display

The main menu is the display that appears after the Infotainment system is switched on.

The display varies depending on the equipment level of the vehicle.

The following information can be displayed:

## Audio Information

Display of the following audio information:

- Current waveband or **Tape** for the cassette player.
- Current station name or station frequency.
- If the Regional function is enabled, **REG** is displayed ⇨ 112.
- If the AS memory function is enabled, **AS** will be displayed ⇨ 112.
- If the RDS function is enabled, **RDS** is displayed ⇨ 112.
- If traffic announcements are enabled, **[TP]** or **[ ]** will be displayed ⇨ 112.



## Outside Temperature

Indication of the current outside temperature. See your car owner's manual.

## Time

Display of the current time. See your car owner's manual.

## Tone settings

Press the **SETTINGS** button to make the following settings:

- **Fader**
- **Balance**
- **Sound**

Press the **BASS** button to enhance or reduce low frequencies.

Press the **TREBLE** button to enhance or reduce high frequencies.

## Setting the volume distribution between front - rear

- Press the **SETTINGS** button to display **Fader**.
- Adjust the value with button ◀ or ▶.

After a few seconds, the audio source is indicated on the display.

## Setting the volume distribution between right - left

- Press the **SETTINGS** repeatedly until **Balance** is displayed.
- Adjust the value with button ◀ or ▶.

After a few seconds, the audio source is indicated on the display.

## Sound

- Press the **SETTINGS** repeatedly until **Sound** is displayed.

- Select the desired tone colour such as **Rock** or **Jazz** with button ◀ or ▶.

After a few seconds, the audio source is indicated on the display.

### Setting Bass

Please note that any sound optimisations will be deactivated.

The **Bass** settings apply to the current audio source and are stored separately for radio and cassette.

1. Press the **BASS** button to display **Bass**.
2. Adjust the value with button ◀ or ▶.

After a few seconds, the audio source is displayed.

3. If you press the **BASS** button again directly after you've changed the settings, the audio source is immediately displayed.

### Setting Treble

Please note that any sound optimisations will be deactivated.

The **Treble** settings apply to the current audio source and are stored separately for radio and cassette.

1. Press the **TREBLE** button to display **Treble**.
2. Adjust the value with button ◀ or ▶.

After a few seconds, the audio source is displayed.

3. If you press the **TREBLE** button again directly after you've changed the settings, the audio source is immediately displayed.
4. Press the **SOUND** button until the last active display appears again.

### Volume settings

Press **SETTINGS** button.

The following menu items are available:

- **TA Volume:** Volume of traffic announcements
- **SDVC:** Speed Dependent Volume Control

- **Ext. In Vol.:** Volume of an external source (for example when connecting a mobile telephone)
- **On Volume:** Maximum volume when the Infotainment system is switched on

### TA Volume

If the TP function is switched on, the system increases the volume for traffic announcements by default. This function allows setting a minimum volume for traffic announcements.

- Press the **SETTINGS** button repeatedly until **TA Volume** is displayed.
- Adjust the value with button ◀ or ▶.

After a few seconds the most recent display reappears.

### SDVC

To compensate for ambient and rolling noise, the Infotainment system's volume is adjusted to the

speed of the vehicle. You can use the SDVC function to adjust the speed-dependent volume.

- Press the **SETTINGS** button repeatedly until **SDVC** is displayed.
- Adjust the value with button ◀ or ▶.

After a few seconds the most recent display reappears.

### Ext. In Vol.

Use this function to set a minimum volume of external audio sources such as a mobile phone.

- Press the **SETTINGS** button repeatedly until **Ext. In Vol.** is displayed.
- Adjust the value with button ◀ or ▶.

After a few seconds the most recent display reappears.

### On Volume

- Press the **SETTINGS** button repeatedly until **On Volume** is displayed.
- Adjust the value with button ◀ or ▶.

After a few seconds the most recent display reappears.

## Radio

Usage .....	110
Station search .....	110
Autostore lists .....	112
Radio data system (RDS) .....	112

## Usage

### Radio mode

Switch from cassette mode to radio mode as shown below:

Tap  buttons.

Tape playback is stopped.

You are listening to the station last tuned in.

### Selecting a waveband

The Infotainment system provides two wavebands: FM and AM. In addition, each of the wavebands has an autostore memory location (AS) where stations can be automatically stored ⇨ 112.

The radio is on.

Press **FM/AM** button briefly.

The radio switches between FM, FM-AS, AM-AS and AM.


The station last selected on the waveband is heard and displayed.

## Station search



### Automatic search

RDS and TP need to be deactivated ⇨ 112.

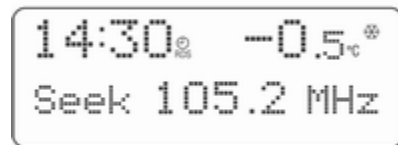Keep the button  or  pressed until **Seek** is displayed.



The radio is muted until a station is found.

- If you know the frequency of the desired station, then keep the button  or  pressed until the frequency is almost reached.

- After releasing the button ◀ or ▶, the next receivable station is automatically tuned in.
- If the radio cannot find a station, it switches automatically to a more sensitive search level. If it still cannot find a station, the last frequency active will be set.

### Manual station search

The manual station search is used to tune in to stations of known frequencies.

Keep the button ◀ or ▶ pressed until **MAN** is displayed.



- Coarse tuning:  
Hold the button ◀ or ▶ down until the desired frequency is almost reached.
- Fine tuning:  
Tap the button ◀ or ▶ until the exact frequency is reached.

### Station memory

6 memory slots are available for each of the following wavelength:

FM, FM-AS (automatically stored FM stations), AM, AM-AS (automatically stored AM stations).

The memory slots can be selected directly in the respective wavelength via the station buttons.

### Manual storing

Tune in to the desired station.

Keep the station button pressed on which the tuned-in station is to be stored.

The radio is muted for a short while and displays the station previously stored in the memory slot.

The tuned-in station is played again and indicated on the display.

The station is stored in the desired memory slot.

**RDS on** or **RDS off** ⇄ 112 are stored together with the station.

### Station list

The Infotainment system stores all receivable FM stations in the background.

The list of receivable stations is updated automatically if the radio searches for a TP station or an automatic storage run is performed using the Autostore (AS) function.

RDS stations ⇄ 112 are sorted by radio company in the station list (HR1, HR2...)

### Update list of stations

Press the **RDS** button until you hear the confirmation signal.

The display shows: **Memory FM** followed by **MEM** and the continuous frequency.

## Autostore lists

### Autostore (AS)

Automatic storing (AS) of any receivable station is possible in all wavebands. These stations are stored in a separate AS memory.

To automatically store stations, proceed as follows:

1. Select the required waveband.
2. Enable/disable on standby for traffic announcements if desired ⇨ 112.
3. Hold down the **AS** button until you hear the confirmation signal.

The radio changes over to the AS level of the selected waveband (FM-AS or AM-AS).

The automatic station storing is started.

The 6 best receivable stations in the selected waveband are stored to memory slots 1 to 6.

After the stations have been stored, the desired station can be selected by pressing the appropriate station button.

RDS is switched on automatically when automatic storing is enabled. First, all receivable RDS stations are stored.

If on standby for traffic announcement is switched on prior to or during automatic storing, the radio will select a memory slot with a traffic announcement station on completion of the automatic station search.

If on standby for traffic announcement is switched on during automatic storing, then the automatic station search will remain active until at least one traffic programme is found.

### Storing new stations with AS

If you drive out of the reception area of a stored station, new stations need to be stored.

## Calling up a station

The desired waveband and the desired mode need to be active ⇨ 110.

Press the **AS** button briefly to go to the AS level.

Select the storage location with the storage buttons.

## Radio data system (RDS)

RDS is a service provided by the radio stations which makes it significantly easier to find the FM channels required and enables them to be received without interference.

RDS is only possible on the FM band.

### Switching RDS on/off

If RDS is switched on, the RDS functions are enabled and only RDS stations are sought during the automatic station search.

If you switch RDS off, the RDS functions will be disabled and the automatic station search will not only look for RDS stations.



Press the **RDS** button to activate RDS.

If the RDS function is switched on, **RDS** and the programme name of an RDS station is displayed.



If the station currently selected is not an RDS station, the radio searches automatically for the next receivable RDS station.

To deactivate RDS, press the **RDS** button again.

If the RDS function is not switched on, the frequency of an RDS station is displayed, **RDS** is not displayed.



#### RDS station selection

RDS must be switched on.

Tap the button ◀ or ▶.

The radio scrolls on to the next RDS station stored in the list of stations ⇄ 110.

#### RDS station search

To search RDS stations, proceed as follows:

RDS must be switched on.

Keep the button ◀ or ▶ pressed until **Seek** is displayed.

The radio is muted until a station is found.

If you switch the traffic programme (TP) on before searching for stations, the system will only search for traffic programme stations.

#### Programme type (PTY)

Many RDS stations transmit a PTY code describing the type of programme broadcast (e. g. news). The PTY code allows selection of stations by programme type.



### Programme type selection

1. Press the **SETTINGS** button until **PTY** is displayed.
2. Press the button ◀ or ▶ repeatedly to select one of the programme types e.g. **News** or **Entertainment**.
3. Press the button ▷ until **PTY** and the scanned frequency are displayed.

The radio is muted and seeks a station of the desired programme type.

If the radio does not find an appropriate station, it plays the station to which the radio was most recently tuned.

If the station search by programme type is activated during tape playback, then the search starts after change-over to radio.

### Regional programmes

Some RDS stations transmit different regional programmes over different frequencies at certain times. You can prevent the radio from changing over to another regional programme during the search for the best receivable station.

#### Switching on regionalisation

The RDS function must be switched on.

Press the **REG** button.

**REG** is shown on the display.

During the search for the frequency with the best reception, the radio stays with the regional programme it is tuned to.

#### Switching off regionalisation

Press the **REG** button briefly again.

**REG** is no longer shown on the display.

The radio allows switching to another regional programme.

### Traffic programme (TP)

Traffic programme stations are FM RDS stations which broadcast traffic news.

Traffic stations can be recognised by the **TP** symbol in the display.

#### Switching traffic programme on/off

- If radio traffic announcement is enabled, **[TP]** or **[ ]** is displayed.
- If the current station is a traffic programme station, **[TP]** appears in the display.
- If the current station is a not traffic programme station, the radio will automatically search for the traffic station with the best reception.  
**[ ]** does not appear on the display.  
Press the **TP** button to switch on **TP**.  
**[ ]** is displayed.
- The automatic station search feature searches only for traffic announcements.
- During automatic search or if reception of a traffic programme is not possible, **[ ]** is displayed.

- If on standby for traffic announcement is switched on, then tape playback is interrupted during a traffic announcement.
- Traffic announcements are played at the preset traffic announcement volume ⇨ 108.

Press the **TP** button again to switch TP off.

[ ] is no longer displayed.

### Traffic programme station search

The traffic programme function must be enabled.

Keep the button ◀ or ▶ pressed until **Seek** is displayed.

The radio only searches for traffic programme stations.

### Hearing traffic announcements only

The traffic programme function must be enabled.

Turn the knob  to the left to reduce the volume to zero.

Or:

Keep button **OI** pressed for at least two seconds to activate muting.

**Mute** is displayed.

Traffic announcements are played at the preset volume for traffic announcement ⇨ 108.

### Deactivating traffic announcements

To switch off a traffic announcement, e. g. during CD playback, proceed as follows:

Press **TP** button.

The traffic announcement is stopped.

Tape playback is continued.

On standby for traffic announcement remains switched on.

### Traffic announcement whilst an external source is active

The external source (e. g. mobile phone) has priority over traffic announcements. However, you may nevertheless listen to a traffic announcement. TP needs to be active.

During the conversation, the radio or cassette player are muted. **Extern In** and **[TP]** are displayed.

During a traffic announcement, the name of the traffic programme is displayed instead of **Extern In**.

The conversation is not interrupted.

Press button **TP** to toggle between the traffic announcement and the external source.

## Audio players

Cassette player ..... 116

### Cassette player

Only included with the CC 20.

#### Inserting a cassette

Insert a cassette into the cassette slot.

**Tape** is displayed.

The tape is played back.


#### Tape playback

Switch from radio mode to tape mode as follows:

Tap the  buttons.

**Tape** is displayed.

The tape is played back.

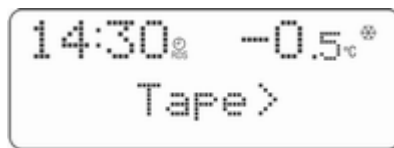


#### Fast forward

Press button  in as far as it will go.

The tape is wound forward.

The station last tuned in is displayed and received.


Tap button  when the desired position is reached.

#### Fast rewind


Press button  in as far as it will go.

The tape is wound backward.

The station last tuned in is displayed and received.

Tap button  when the desired position is reached.

#### Traffic announcement in tape mode

Traffic announcements can be received in tape mode. Traffic programme (TP)  112.

#### Removing a cassette

Press buttons  in as far as it will go.

The cassette is ejected.

The last radio station used will automatically be played.

the cassette can be ejected even if the appliance is turned off.



# Index

<b>A</b>			
AM.....	110	Multifunction knob.....	105
AS.....	112	Mute.....	105
Automatic search.....	110	<b>O</b>	
Automatic switch off.....	105	On Volume.....	108
Autostore level.....	112	Operation .....	105
Autostore lists.....	112	Overview .....	103
<b>B</b>		<b>P</b>	
Balance.....	107	Programme type.....	112
Bass.....	107	PTY.....	112
<b>C</b>		<b>R</b>	
Cassette player.....	116	Radio data system (RDS) .....	112
<b>E</b>		Regional programmes.....	112
External In Volume.....	108	<b>S</b>	
<b>F</b>		SDVC.....	108
Fader.....	107	Setting the volume.....	105
FM.....	110	Sound settings.....	107
<b>G</b>		Speed dependent volume control (SDVC).....	108
General information.....	100	Station list.....	110
<b>I</b>		Station memory.....	110
Ignition logic.....	105	Station search.....	110
<b>M</b>		Store.....	110
Main display.....	105	Switching the Infotainment system on or off.....	105
Manual tuning.....	110		

**T**

TA volume.....	108
Theft-deterrent feature .....	100
Tone settings.....	107
TP.....	112
Traffic announcements.....	112
Traffic programme.....	112
Treble.....	107

**U**

Update stations.....	110
Usage.....	110
Using the Infotainment system...	105

**V**

Volume.....	105
Volume settings.....	108





---

# Mobile phone portal

Introduction .....	122
Voice recognition .....	134
Index .....	140

## Introduction

General information .....	122
Connection .....	125
Bluetooth connection .....	126
Emergency call .....	129
Operation .....	129

## General information

The Mobile phone portal offers the opportunity to hold telephone conversations using the mobile phone via a vehicle microphone and vehicle loud speaker system and to operate the most important mobile telephone functions via the Infotainment system in the vehicle.

The Mobile phone portal is operated via the steering wheel remote control system, a speech recognition system and a multifunction button on the radio. The menu-driven operations and status are shown via the info display.

The fact that the most important content on the telephone display is shown on the info display enables you to operate the whole portal comfortably.

The mobile phone should be operated via an exterior aerial by clicking it into a telephone-specific adapter.

When a telephone connection is active, the radio sound is switched off. When the telephone connection has ended, the radio sound is switched on again.

## General advice on these operating instructions

You can find detailed functional descriptions for your Infotainment system in the operating instructions included with your Infotainment system.

Information on telephone-specific adapters for the mobile telephone is available from your Vauxhall Authorised Repairer.

Not all Mobile phone portal functions are supported by every phone. The telephone functions possible depend on the mobile telephone used and the network operator. Further information is given in the operating instructions for the mobile telephone and in the instructions for the telephone-specific adapter, and can be obtained from the network operator.

**⚠ Warning**

The Infotainment system has to be used so that the vehicle can be driven safely at all times. If in doubt stop your vehicle and operate the Infotainment system while the vehicle is stationary.

**Operating the mobile telephone**

Mobile telephones affect your environment. This is the reason why safety rules and regulations were drawn up. You should find out about the relevant regulations before you use the telephone function.

**⚠ Warning**

Use of the hands-free facility while driving can be dangerous because your concentration is reduced when telephoning. Park your vehicle before you use the hands-free facility. Follow the stipulations of the country in which you find yourself at present.

Do not forget to follow the special regulations that apply in specific areas and always switch off the mobile phone if the use of mobile phones is prohibited, if interference is caused by the mobile phone or if dangerous situations can occur.

**Bluetooth™**

The Mobile telephone portal supports Bluetooth™ Handsfree Profile V. 1.5 and is specified to Bluetooth™ Special Interest Group (SIG).

Further information on the specification can be found on the internet under

<http://qualweb.bluetooth.org>. The Bluetooth™ qualification code of the Mobile phone portal is B02237.

When devices are being paired, a random PIN code of at least four digits should be selected for reasons of safety.

**Declaration of conformity**

We hereby declare that the Mobile phone portal is compliant with the basic requirements and other relevant stipulations of the guideline 1999/5/EC.

**Operating the speech recognition system**

Do not use the speech recognition system in emergencies because your voice can change so much in stressful situations that you can no longer be sufficiently recognised in order for the desired connection to be created quickly enough.

### Base plate for the telephone support

Keep the base plate contacts free from dust and dirt.


### Charging the telephone batteries

As soon as the Mobile phone portal has been switched on and the telephone has been slotted into the telephone-specific adapter, the telephone's batteries are charging.

### Control elements


The Mobile phone portal can be operated via a steering wheel remote control system, speech recognition system and a multifunction knob on the radio.

As soon as the Mobile phone portal has been switched on and the mobile telephone is logged in, the start page appears on the display.

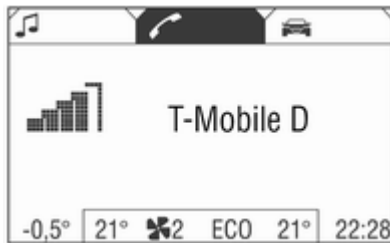

Selection of the functional ranges in the headline and additional operations are described below:

### Steering wheel remote control system

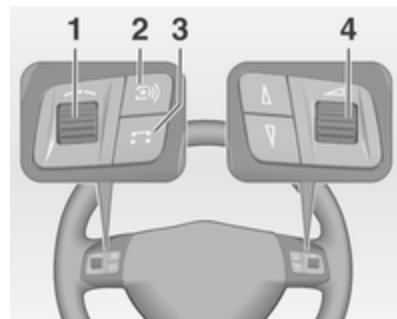

#### 1 Thumbwheel

Turn: select menu items and commands

Press: confirm a selection (OK)

#### 2 button

Press: Selecting/switching off speech recognition system

↪ 134

### 3 button

Press: Accept or end a telephone call or access the call list directly

### 4 Turn: adjust volume

## Operating the Infotainment system with the multifunction knob

See "Control elements on instrument panel" in the relevant Infotainment system manual.

The Mobile phone portal can be operated optionally via the speech recognition system ⇨ 134.

## Connection

A connection can be created between a mobile telephone and the Infotainment system via:

- a telephone-specific adapter
- a Bluetooth™ connection as long as the mobile telephone and the Mobile telephone portal support this function

In order for a connection to be created, the Mobile telephone portal must be switched on and the mobile


telephone logged in. The Mobile telephone portal switches itself on and off via the battery. If the battery is switched off, you can switch the mobile telephone on and off via the Infotainment system. When the battery is switched off, the operating time is limited to one hour.

On many mobile telephones, the adapter is only used as a charging station. In this case, the connection must be created via Bluetooth™ ⇨ 126.

You can obtain information on available telephone-specific adapters for your mobile telephone from your Vauxhall Authorised Repairer.

For information on the Bluetooth™ function for your mobile telephone, see the operating instructions for the mobile telephone.

## Slotting the telephone-specific adapter into the base plate

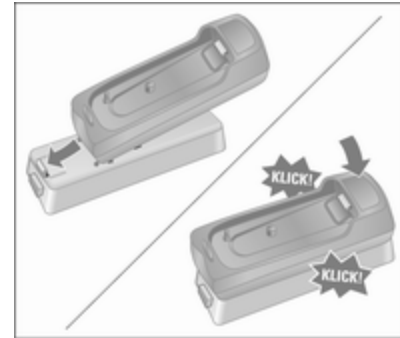


Specific assembly instructions for each adapter are enclosed with the product. Before you assemble the adapter, please read about the specific assembly process in the instructions.

Fasten the adapter to the base plate.

Ensure that the contacts are connected properly. You must hear a click sound when the adapter is being slotted in.

In order to remove the adapter, press the release button on the base plate.

### Inserting the mobile telephone into the telephone-specific adapter

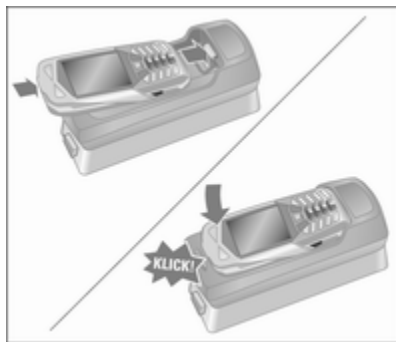

Insert the mobile telephone into the adapter.

Ensure that the contacts are connected properly. You must hear a click sound when the mobile telephone is being inserted.

In order to remove the mobile telephone, press the release button on the adapter.


### Bluetooth connection

The Bluetooth™ function on the mobile telephone must be activated, see operating instructions for the mobile phone.

Bluetooth™ is a radio standard for wireless connection of e.g. a mobile telephone to other equipment. Information such as the phone book, call list, network operator and field intensity can be transmitted. Depending on type of equipment, the functions may be restricted.

### Creating a connection


In the main menu select the telephone symbol from the headline.

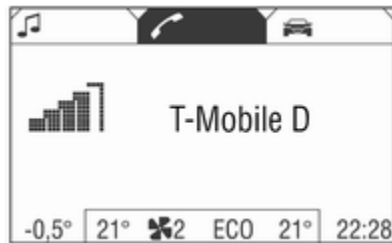

When the mobile telephone is slotted in the adapter, the telephone menu or **Bluetooth™** menu appear on the display.


If the mobile telephone is not slotted into the adapter, the **Bluetooth™** menu appears on the display.

Select the **Bluetooth** menu item.

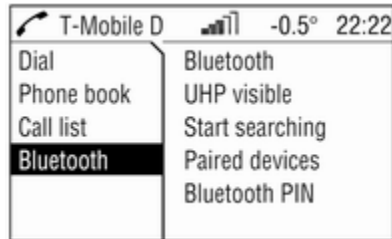

If Bluetooth™ has been deactivated, proceed as follows:

1. Select the **Bluetooth** menu item.  
If Bluetooth™ has been activated, the remaining menu items will appear on the display.

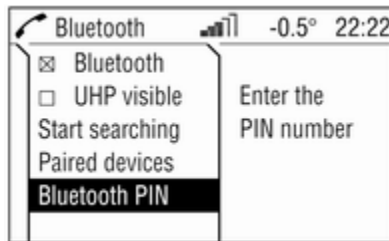


2. Select the **Bluetooth PIN** menu item.
3. Enter a random Bluetooth™ PIN and confirm it with **OK**.  
For safety reasons, a randomly selected PIN code of at least four digits should be used.
4. Ensure that the Bluetooth™ function of the mobile telephone has been activated and set to "visible".

5. Select the **Start searching** menu item.

During the search process for Bluetooth™ devices, the word **Searching...** is displayed.

When the search process has ended, the Bluetooth™ devices are listed in the **Found devices** menu.

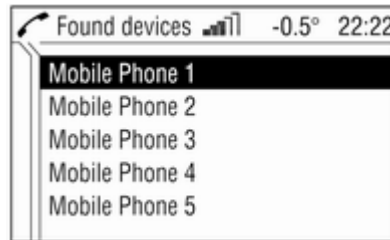

6. Select the required mobile telephone.  
While the connection is being created, the message **The connection will be established...** appears on the display.  
"Please enter the Bluetooth PIN" or a similar request appears on

the display of the mobile telephone.

7. Using the keypad on the mobile telephone, enter the same Bluetooth™ PIN as for the Infotainment system and confirm it with **OK**.

The message "Add device to known devices?", or a similar message, appears on the display of the mobile telephone.

8. Confirm this on the keypad of the mobile phone by pressing **OK**.

Once a connection has been created successfully, the message **is added to paired devices** appears on the display.


The connection between the mobile telephone and the Infotainment system has now been created.

Up to five devices can be added to the list.

## Closing the connection


1. In the **Bluetooth™** menu, select **Paired devices**.

The **Paired devices** menu appears on the display.

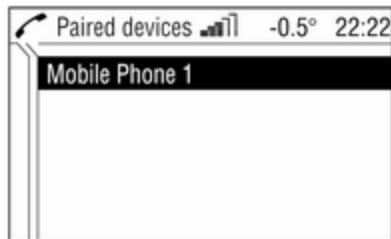

2. Select the required mobile telephone.

The **Bluetooth™** menu appears on the display.

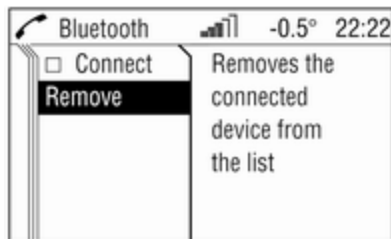

3. Deactivate **Connect**.

The message **Disconnected!** appears followed once again by the **Bluetooth™** menu.

4. Select **Remove**.

The message **Removed!** appears followed once again by the **Bluetooth™** menu.

### UHP visible

Activating this function enables the mobile telephone portal to be detected by other Bluetooth™ devices. In this way e.g. a Bluetooth™ connection can be established from the mobile telephone to the Mobile telephone portal.

1. In the **Bluetooth™** menu select **UHP visible**.

The Mobile phone portal can be seen by the other devices for the next 3 minutes.

2. Start the mobile telephone's search function for Bluetooth™ devices (see the operating

instructions for the mobile telephone).

The message "Device found: UHP" appears on the display of the mobile telephone.

3. Start the mobile telephone's connection function (see the operating instructions for the mobile telephone).
4. Enter the **Bluetooth PIN** in the Infotainment system).
5. Enter the "Bluetooth PIN" on the mobile telephone.

The Bluetooth™ connection has been created between the mobile telephone and the Infotainment system.

### Freespeech

A telephone connection is active.

Move the thumbwheel.

A context menu is opened. Activate **Freespeech**. The sound is sent to the car's loudspeakers.



## Emergency call

### Warning

Connection setup cannot be guaranteed in all situations. For this reason you should not rely exclusively on a mobile phone when a vitally important communication (e. g. a medical emergency) is concerned.

In some networks it may be necessary for a valid SIM card to be properly inserted in the mobile phone.

### Warning

Bear in mind that you can make and receive calls with the mobile phone, if it is in a service area with a sufficiently strong signal. Under certain circumstances emergency calls cannot be made on all mobile phone networks; it is possible that they cannot be made when certain network services and/or telephone functions are active. You can enquire about this with the local network operators.

The emergency call number can differ depending on the region and country. Please enquire beforehand about the correct emergency call number for the relevant region.

### **Making emergency calls**

Dial the emergency number (e.g. 112).

The connection to the emergency call centre is created.

Answer if the service staff ask you about the emergency.

### **Ending emergency calls**

Select the **Hang-up** menu item.

Or:

Press the  key.

### Warning

Do not end the call until you are requested to do so by the emergency call centre.

## Operation

### **Introduction**

As soon as a connection is created between the mobile telephone and the Infotainment system via the telephone-specific adapter or via Bluetooth™, you can also operate many of the mobile telephone's functions via the Infotainment system.

For example, via the infotainment system you can create a connection with the telephone numbers saved in the mobile telephone or change the telephone numbers.

As a rule, you can also continue operating the system using the mobile telephone, e.g. by accepting a call or setting the sound level.

After a connection has been created between the mobile telephone and the Infotainment system, data is transferred from the mobile telephone to the Infotainment system. This may take some time, depending on the brand of telephone. During this period of time, the mobile telephone can only be operated to a limited extent via the Infotainment system.

Some telephones do not support all of the Mobile phone portal's functions. As a result of this, these specific telephones may work differently from the functional content described in the manual. For further information, see the instructions on the telephone-specific adapter.

Calls which arrive or are being made when the mobile telephone is being slotted into the telephone-specific adapter, are kept and are transmitted as soon as the mobile telephone has been slotted into the adapter.

In addition to operating using the steering wheel remote control system, some functions can also be operated using a speech recognition system ↗ 134.

If a connection has been created via the telephone-specific adapter, the functionality of the mobile telephone can be limited (in this respect, see instructions enclosed with the adapter).

When a Bluetooth™ connection exists, the functional scope of the mobile telephone can also be limited.

### Entering PIN codes

When the mobile telephone is switched on after being slotted into the telephone-specific adapter, the PIN code must still be entered.

The Infotainment system is switched on.

**No PIN** appears on the display. Select the telephone symbol from the headline.

**Please enter your PIN Code!** appears on the display.



Enter the PIN code using the thumbwheel and confirm this by pressing **OK**.

The PIN code can also be spoken in using the speech recognition system ↗ 134.

**PIN verification, please wait...** appears on the display.

If the PIN code is entered incorrectly three times, the SIM card is blocked.

**SIM locked** appears on the display.

- A blocked SIM card can only be released by entering the PUK via the mobile telephone, see operating instructions for the mobile telephone.
- When the correct PIN code has been entered and confirmed, the previously selected menu appears on the display.
- Some network operators allow you to switch off the request for the PIN code. Additional information on this subject can be found in the operating instructions for the mobile telephone and can be requested from the local network operator.


### Making telephone calls

Three different options where dialling a telephone number is concerned are available:

- dial the telephone number manually
- select the telephone number from the phone book
- select the telephone number from the list of calls (calls made, calls received and missed calls)

#### Dial

#### Dialling the telephone number manually

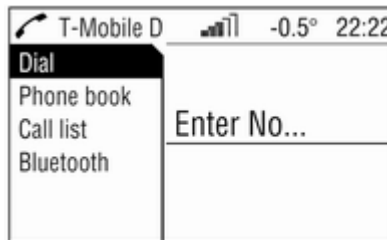

In the telephone menu:  
Select the **Dial** menu item.

**Enter No...** appears on the display.

Select the digits for the telephone calls from the foot of the display in order and start the dialling process using **Dial**.

#### Phone book

After creation of the connection, the phone book is compared with the temporary phone book if the same SIM card or telephone is used. In this time, new entries are not displayed. If the SIM card or telephone are different, the phone book is loaded afresh. This process may take a few minutes, depending on telephone model. The new entries are only saved after the ignition is turned off and the ignition key removed.

#### Selecting the telephone numbers from the phone book

In the telephone menu select the **Phone book** menu item.

A list of all the entries in the phone book appears on the display.




Select the desired entry and start the dialling process.

#### Entries with several numbers

Depending on telephone type, several numbers may be stored under one phone book entry.

Under **Phone book**, select the desired entry.

A list of all numbers stored under this entry appears on the display.

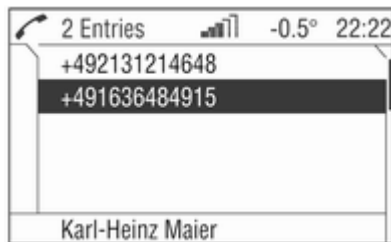

Select the number you want and start the dialling process.

#### Filtering

To help you find phone book entries, a filter can be activated:

Select the **Phone book** menu item.

A list of all the entries in the phone book appears on the display.



Select menu item **Filtering**.

The selected check box indicates active filtering. The phone book entries are grouped by initial letter (abc, def, ...).

Select the entry you want and start the dialling process.

#### Call list

##### Selecting telephone numbers from the list of calls

Select the **Call list** menu item.

A list of the most recently called telephone numbers is displayed. The status of the telephone number (dialled, received or missed) is displayed in the footer.

Select the desired entry and start the dialling process.

#### Incoming calls

When a call is incoming, a selection menu appears for accepting or refusing a call.

#### Accepting calls

Select the **Accept** menu item.

or:

Press the  key .

### Refusing calls

Select the **Reject** menu item.

### Ending calls

Do the following in order to end the telephone call:

Press the .

or:

Move the thumbwheel.

A context menu is opened.

Select **Hang-up**.


### Functions during a call

Some functions are only available during a call.

A telephone connection is active.

Move the thumbwheel.

A context menu is opened.

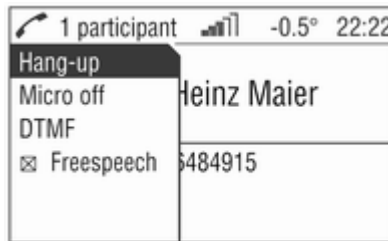

The following functions are available:

#### Hang-up

This function ends the telephone connection.

#### Micro off

This function turns off the telephone microphone.

#### DTMF (tone)

Various phone services (e.g. Voice-Mail or telephone banking) require the input of control tones.

When a telephone connection is active:

Select the menu item **DTMF**.

The **DTMF** menu is displayed.




You can now enter numbers using the thumbwheel.

In the display footer, select the figures required.

The signal tones are now sent.

#### Freespeech

With a mobile telephone connected via Bluetooth™, with this function you can turn off the hands-free function  126.

This menu point is invisible when the mobile telephone is connected to the Infotainment system via an adapter.

## Voice recognition

 
Voice recognition ..... 134

### Voice recognition

The speech recognition system enables you to operate some of the mobile telephone's functions by voice input. It recognises commands and sequences of numbers independently of the person speaking. The commands and sequences of numbers can be spoken without a break between the individual words.

You can also save telephone numbers using a name randomly chosen (voice tag). The telephone connection can be created using this name.

If the speech recognition system fails to operate properly or fails to recognise your voice, it provides you with acoustic messages and asks you to input the command you want again. The speech recognition system also provides an answer to important commands and, if required, makes enquiries.



Stop the voice dialogue at any time by re-pressing .

Before you dial a telephone number, the following preconditions must exist:

- The mobile telephone must be ready for operation and slotted into the telephone-specific adapter, or a Bluetooth™ connection must exist.
- The mobile telephone must be logged in.

To prevent conversations being held in the interior of the vehicle from causing inadvertent control of the mobile telephone or audio system, the speech recognition system only starts once it has been activated.

### Activating the speech recognition system

 By pressing , the speech recognition system is activated and the symbol  appears on the display. The radio is switched to "silent" for the duration of the dialogue. Any traffic news coming in will be interrupted.

The functions can only then be operated if the mobile telephone is logged into a network.

### Ending the dialogue

There are various ways to deactivate the speech recognition system and end the dialogue:

- By pressing **☒**)
- Time-outs: if nothing has been input for a certain period of time

The speech recognition system is also interrupted by an incoming call.

### Operation

With the aid of the speech recognition system, the mobile telephone can be operated very comfortably using the voice input function. Simply activate the speech recognition system and say the desired command. Once the command has been input, you will be led through the dialogue with the corresponding questions and messages in order to reach the required action.

Say the commands and digits in a normal voice, without any artificial pauses between the numbers.

Recognition is most successful when you pause for at least half a second after every three to five numbers.

The Infotainment system simultaneously reacts to commands with voice messages and displays.

### SIM card

If no SIM card has been inserted, the following message appears: **Please insert a SIM card!**

Once you have inserted a SIM card, you will be asked to enter the PIN code. For more on this, see the next section.

### PIN code

If the PIN code has not been entered, the following message appears: **Please enter the PIN code!**

Now say the PIN code in a normal voice, without any artificial pauses between the numbers.

The following commands are available:

- **"Accept"**: The PIN code is confirmed.
- **"Change"**: The number last entered is deleted.
- **"Delete"**: The PIN code is deleted.
- **"Additional digits"**: Additional numbers can be entered.

**Example of a dialogue whereby a PIN code is entered:**

Voice output: **"Please enter the PIN code!"**

User: **"One Two Three Four – Accept"**

Voice output: **"The PIN code is incorrect!"**

User: **"Four Three Two One – Accept"**

Voice output: **"The PIN code has been accepted"**

### Main commands

After the speech recognition system has been activated, you will hear a short sound, which is a signal to

inform you that the speech recognition system is waiting for an input.

The following commands are available:

- "Call"
- "Redial"
- "Save"
- "Delete"
- "Phonebook"
- "Help"
- "Cancel"

Detailed description of these commands see below.

### "Call"

Using this command, you can input a telephone number which has been saved in the phone book under a name (voice tag) or which is to be used to create a connection. After this command, the following commands are available:

- **"Number"**: The connection is created using the number entered.
- **"Name"**: The connection is created using the voice tag.

### "Number"

After this command has been given, you will be asked to enter the number. The Infotainment system repeats the recognised numbers. You can then input additional numbers or the following commands:

- **"Call"** or **"Accept"**: The inputs are accepted.
- **"Change"**: The last block of numbers has been deleted.
- **"Delete"**: The complete input has been deleted.
- **"Help"**: The dialogue is ended and all commands available in this context are listed.
- **"Plus"**: A plus is placed before the number for foreign calls.
- **"Additional digits"**: Additional digits are being added.
- **"Cancel"**: Ending the dialling process. After the request for a correction, all blocks of numbers

previously entered are repeated with the exception of the last block. If all inputs have been deleted, you are once again asked to input a telephone number.

If there is a voice pause of more than one second between the individual numbers, the Infotainment system assumes that the process of inputting the block of numbers has ended and repeats the block of numbers.

In order to make a foreign call, you can say the word **"Plus"** (+) in front of the number. The plus allows you to make a call from that country without knowing the foreign dialling code for the country in question. Then say the country code.

The country code corresponds to the conventional format, i. e. 49 for Germany, 44 for Great Britain, etc. The "0" must be left out of the local network code (dialling code) except in Italy.

**Example of a dialogue between the user and voice output to dial a telephone number:**

User: "Call"



Voice output: **"Name or Number?"**

User: **"Number"**

Voice output: **"The number, please!"**

User: **"Plus Four Nine"**

Voice output repeats: **"Plus Four Nine"**

User: **"Seven Three One"**

Voice output repeats: **"Seven Three One"**

User: **"One One Nine Nine"**

Voice output repeats: **"One One Nine Nine"**

User: **"Change"**

Voice output repeats the blocks of numbers previously input: **"Plus Four Nine – Seven Three One"**

User: **"One One Nine One"**


Voice output repeats: **"One One Nine One"**

User: **"Call"**

Voice output: **"The number is being dialled"**

### **"Name"**

Using this command, you can select a telephone number under a name (voice tag).

If the system recognises a name entry already available, it is shown on the display. The symbol  representing a voice tag appears to the right of the name. The connection is created using the voice tag.

### **"Redial"**

Using the **"Redial"** command, the number most recently dialled can be redialled.

### **"Save"**

Using this command, you can save a telephone number under a voice tag.

Additionally the previously input voice tag in the phone book can be included.

Voice tags can only be included in the phone book if they are saved in the Infotainment system.

A maximum of 25 voice tags can be stored in the phone book. If 25 voice tags are already stored, the message is given **"The speech memory is full!"**.

Voice tags are dependent on the speaker, which means that only the person who has spoken in the voice tag can select it.

After three invalid attempts, the speech recognition system is turned off automatically.

It can happen that the two names input are too different for the speech recognition system, which then rejects them. You can then decide if you want to input the names again or end the process:

- **"Yes"**: Input the names again.
- **"No"/"Cancel"**: The dialogue is ended without anything being saved.

In order to prevent a cut-off at the beginning of the recording when names are being saved, a short pause should be left after the request for an input.

In order to be able to use the voice tag independently of the location, i.e. in other countries, all telephone numbers should be entered with a **"Plus"** and the country code.

#### **Example of a name being saved as a voice tag:**

User: **"Call"**

Voice output: **"Name or Number?"**

User: **"Name"**

Voice output: **"The name, please!"**

User: <Miriam>

Voice output: **"The number, please!"**

User: **"Plus Four Nine"**

Voice output: **"Plus Four Nine"**

User: **Seven Three One.**

Voice output: **"Seven Three One"**

User: **"One One Nine One"**

Voice output: **"One One Nine One"**

User: **"Save"**

Instead of **"Save"** you can also use the command **"Accept"**.

#### **"Delete"**

Using the **"Delete"** command, you can delete a previously saved voice tag.

#### **"Phonebook"**

Using the command **"Phonebook"**, you can dial a previously saved voice tag which you have included in the phonebook. You can also delete a voice tag. After inputting the **"Phonebook"** command, you will be asked to input a name.

After the recognised name has been output, you can input the following commands:

- **"Call"**: The connection to the saved number is created.
- **"Delete"**: The voice tag is deleted.
- **"Cancel"**: The dialogue is ended.
- **"Help"**: The dialogue is ended and all commands available in this context are listed.

#### **Example of how to dial a telephone number saved in the directory:**

User: **"Phonebook"**.

Voice output: <Karl-Heinz>

Voice output: <Markus>

Voice output: <Miriam>

User: **"Call"**

Instead of **"Call"** you can also use the command **"Accept"**.

Voice output: **"The number is being dialled"**

#### **"Help"**

Using the **"Help"** command, all of the commands available in this particular context are listed.

#### **"Cancel"**

Using the **"Cancel"** command, the speech recognition system can be switched off.

## **Changing language**

### **Change the language shown**

The Infotainment system supports 12 pre-set languages to be shown on the display. Contact your Vauxhall Authorised Repairer to activate a different language from that preset.

**Change the language spoken**

The speech recognition system supports the following 6 languages:

- German
- (British) English
- French (EU)
- Italian
- Spanish (EU)
- Dutch

Contact your Vauxhall Authorised Repairer to activate a different language from that preset.

# Index

<b>A</b>		<b>H</b>	
Accepting calls.....	129	Hang-up.....	129
Activating speech recognition.....	134	<b>L</b>	
<b>B</b>		Lists.....	129
Bluetooth connection.....	126	<b>M</b>	
<b>C</b>		Making telephone calls.....	129
Call lists.....	129	Micro off.....	129
Changing the language.....	134	<b>N</b>	
Connection.....	125	Name.....	134
Cradle.....	125	Number.....	134
<b>D</b>		<b>O</b>	
Dialling.....	129	Operation.....	129
DTMF.....	129	<b>P</b>	
<b>E</b>		Phone book.....	129
Emergency call.....	129	<b>R</b>	
Ending calls.....	129	Redialling.....	129
Entering PIN codes.....	129	Refusing calls.....	129
Entries with several numbers.....	129	<b>S</b>	
<b>F</b>		Selecting telephone numbers.....	129
Filtering.....	129	Speech recognition.....	134
Freespeech.....	126	Steering wheel remote control....	122
Functions during a call.....	129	<b>T</b>	
<b>G</b>		Telephone numbers.....	129
General information.....	122	Telephone-specific adapter.....	125

---

**V**

Voice recognition ..... 134

